

22 mm Pushbutton and Pilot Light Cross-Reference — Schneider Harmony XB4 / XB5, Siemens SIRIUS ACT 3SU1, Eaton M22 / RMQ-Titan, ABB by Function and Colour

cBallast Technical Sourcing · generated 2026-09-29 · cballast.com/documents/22-mm-pushbutton-and-pilot-light-cross-reference-schneider-harmony-xb4-xb5-siemens-sirius-act-3su1-eaton-m22-abb · first 103 rows; the full table is online

Ø22 mm control devices from the major makers are functionally interchangeable: the panel cut-out (22.3 mm), the operating functions (momentary or latching pushbutton, mushroom head, emergency stop with turn or pull release, two- or three-position selector with knob or key, pilot light, illuminated pushbutton) and the colour coding to IEC 60073 (red stop, green start, yellow reset, blue mandatory, white/black general) are common. Complete devices are listed here by function and colour with one column per make — Schneider Harmony XB4 (metal bezel) and XB5 (plastic), Siemens SIRIUS ACT 3SU1, Eaton M22 (RMQ-Titan) and ABB Compact/Modular — so the equivalent complete unit can be quoted. Contact blocks (1 NO, 1 NC, 1 NO + 1 NC) are stated where the catalogue row includes them.

Colour · contacts	Schneider Electric	Siemens	Eaton	ABB
Pushbutton, flush or projecting (momentary / latching) · black	ZB4BZ62, ZB4BA232, XACB9212, ZB4BA335, ZB4FA335, ZB4FL232	3SU1200-0FB10-0AA0, 3SU1000-0AB10-0AA0, 3SU1000-0AA10-0AA0, 3SB2000-0LB01, 3SU1050-0AB10-0AD0, 3SU1050-0AB10-0AA0	FAK-S/KC11/I, M22-D-S, 195243, CWIZ-04/09, M22-D4-S, M22-DH-S	—
Pushbutton, flush or projecting (momentary / latching) · black · 1 NC	—	3SU1150-0AB10-3CA0, 3SU1100-0AB10-3CA0	—	—
Pushbutton, flush or projecting (momentary / latching) · black · 1 NO	XB4BA21, XB5AA21, XB5AA3351, XB4BA3351, XB4BP21, XB4BA215	3SU1100-0AB10-1BA0, 3SU1100-0AB10-3BA0, 3SU1150-0AB10-3BA0, 3SU1150-0AB10-1BA0	—	—
Pushbutton, flush or projecting (momentary / latching) · black · 1 NO + 1 NC	XB5AA25, XB7NA25, XB7NH25	—	—	2CCA703154R0001
Pushbutton, flush or projecting (momentary / latching) · blue	XB4BP61GEX, ZB4FH63, ZB5FH63, ZB4FH063, ZB5FH063, ZB4FH06	3SU1050-0AA50-0AA0, 3SB2202-0AF01, 3SB2000-0LF01, 3SU1050-0AB50-0AR0, 3SU1000-0AB50-0AA0, 3SU1050-0AB50-0AA0	M22-D-B	—
Pushbutton, flush or projecting (momentary / latching) · blue · 1 NO	XB4BA61, XB5AA61, XB4BP61, XB4FA61, XB4BA615, XB5FA61	3SU1150-0AB50-1BA0, 3SU1100-0AB50-1BA0, 3SU1100-0AB50-3BA0, 3SU1150-0AB50-3BA0, 3SU1106-0AB50-1FA0, 3SU1156-0AB50-3FA0	—	—
Pushbutton, flush or projecting (momentary / latching) · blue · 1 NO + 1 NC	XB5AA65	—	—	2CCA703155R0001
Pushbutton, flush or projecting (momentary / latching) · clear	—	3SU1000-0AB70-0AA0, 3SU1050-0AB70-0AA0	—	—
Pushbutton, flush or projecting (momentary / latching) · green	ZB5AA38, ZB5AA331, ZB5FH03, ZB4BA34, ZB4BA331, ZB5AH03	3SU1050-0AB40-0AA0, 3SU1050-0AA40-0AA0, 3SU1000-0AB40-0AA0, 3SB2202-0AE01	M22-D-G-X1, M22-D-G-X1/K10, M22-DP-G, M22-D-G-X1/KC11/I, M22-DR-G-X1, M22-XD-G-X1	—
Pushbutton, flush or projecting (momentary / latching) · green · 1 NO	XB4BA31, XB5AA31, XB4BA3311, XB4FA31, XB4BA315, XB4BP31	3SU1102-0AB30-1BA0, 3SU1100-0AB40-3BA0, 3SU1100-0AB40-1BA0, 3SU1150-0AB40-1BA0	—	—
Pushbutton, flush or projecting (momentary / latching) · green · 1 NO + 1 NC	XB7NH35, XB5AA35	—	—	E215-16-11D
Pushbutton, flush or projecting (momentary / latching) · grey	ZB4FA8, ZB4BA8, ZB5AA8, ZB5FA8	3SU1100-0AB80-1FA0, 3SU1050-0AB80-0AA0	—	—
Pushbutton, flush or projecting (momentary / latching) · grey · 1 NC	XB5AA425, A9E18039, A9E18037, A9E18030, XB5AL425	3SU1801-0AC00-2AB1, 3SU1851-0AC00-2AB1	—	—

Pushbutton, flush or projecting (momentary / latching) · grey · 1 NO	XALD102, A9E18033, A9E18032, XB5AA315, XB5AA515, A9E18038	3SU1851-0AD00-2AB1, 3SU1803-0AB10-4HB1, 3SU1801-0AB00-2AB1, 3SU1802-0AB00-2AB1, 3SU1851-0AB00-2AB1, 3SU1802-0AC00-2AB1	—	—
Pushbutton, flush or projecting (momentary / latching) · grey · 1 NO + 1 NC	XALD213, XALD215	—	—	2CCA703150R0001
Pushbutton, flush or projecting (momentary / latching) · orange	ZB4FH53, ZB4FH5	3SU1001-0AB00-0AA0, 3SU1051-0BB00-0AA0	—	—
Pushbutton, flush or projecting (momentary / latching) · red	ZB4BZ64, ZB4BA48, ZB5AH04, XB4BA941, ZB4FA434, ZB4FL434	3SU1251-0EB20-0AA0, 3SU1000-0AB20-0AA0, 3SU1250-0EB20-0AA0, 3SU1200-0EB20-0AA0, 3SU1050-0AA20-0AA0, 3SU1050-0AB20-0AA0	FAK-R/V/KC11/IY, M22-D-R-X0/K01, FAK-R/KC11/I, M22-DR-R-X0, M22-D-R-X0, M22-DRH-R-X0	—
Pushbutton, flush or projecting (momentary / latching) · red · 1 NC	XB4BA42, XB5AA42, XB4BA4322, XB4BP42, XB4FA42, XB4BA425	3SU1102-0AB20-1BA0, 3SU1100-0AB20-3CA0, 3SU1100-0AB20-1CA0, 3SU1150-0AB20-1CA0	—	—
Pushbutton, flush or projecting (momentary / latching) · red · 1 NO	XB5AA41, XB4FL4325, XB4BW24BM5GEX, XB6AA45B	3SU1152-0AB20-1FA0, 3SU1106-0AB20-1FA0, 3SU1102-0AB20-1FA0, 3SU1156-0AB20-1FA0	—	—
Pushbutton, flush or projecting (momentary / latching) · red · 1 NO + 1 NC	XB5AA45	—	FAK-R/V/KC01/IY	2CCA703151R0001
Pushbutton, flush or projecting (momentary / latching) · white	MTN6185-0325, MTN6185-6035, MTN6192-6035, MTN6194-6035, MTN6191-6035, MTN6193-6035	3SU1050-0AB60-0AC0, 3SU1000-0AB60-0AA0, 3SU1050-0AB60-0AA0, 3SU1000-0BB60-0AA0, 3SU1050-0CB60-0AA0, 3SU1100-0AB60-3FA0	M22-DR-W-X1, M22-DR-W, Y7-216681, M22-D-W	—
Pushbutton, flush or projecting (momentary / latching) · white · 1 NO	XB5AA3341, XB4BA3341, XB4BA115, XB5AA11, XB4FA11, XB5FA3341	3SU1100-0AB60-3BA0, 3SU1150-0AB60-1BA0, 3SU1100-0AB60-1BA0, 3SU1150-0AB60-3BA0, 3SU1156-0AB60-1FA0, 3SU1102-0AB60-1FA0	—	—
Pushbutton, flush or projecting (momentary / latching) · white · 1 NO + 1 NC	XB5AA15	—	—	—
Pushbutton, flush or projecting (momentary / latching) · yellow	ZB4BA58, XB4BP581GEX, XB4BP51GEX, ZB4FH083, ZB5AH5, ZB4FH83	3SB2202-0AD01, 3SB2000-0LD01, 3SU1050-0AB30-0AA0, 3SU1000-0AB30-0AA0, 3SU1051-0BB30-0AA0, 3SU1100-0AB30-3FA0	M22-D-Y	—
Pushbutton, flush or projecting (momentary / latching) · yellow · 1 NO	XB4BA51, XB5AA51, XB4BP51, XB4BA515, XB5FA51	3SU1100-0AB30-3BA0, 3SU1100-0AB30-1BA0, 3SU1150-0AB30-1BA0, 3SU1106-0AB30-3FA0, 3SU1152-0AB30-3FA0, 3SU1102-0AB30-3FA0	—	—
Pushbutton, flush or projecting (momentary / latching) · yellow · 1 NO + 1 NC	XB5AA55	—	—	2CCA703153R0001
Illuminated pushbutton · amber	—	3SU1152-0AB00-1BA0	—	—

Illuminated pushbutton · blue	ZB5FW363, XVUC46, ZB4FW163, ZB4FW363, ZB5FW163, ZB4BH63	3SU1102-0AB50-1BA0, 3SB2206-0AF01, 3SU1001-0AB50-0AA0, 3SU1051-0AB50-0AA0	M22-DL-B, SL7-BL120-B, SL4-FL24-B-M, SL4-BL120-B, SL7-L24-B, SL7-L230-B	—
Illuminated pushbutton · blue · 1 NO	XB4BP683BM5GEX	3SU1152-0AB50-3BA0, 3SU1152-0AB50-1BA0, 3SU1156-0AB50-3BA0, 3SU1156-0AB50-1BA0, 3SU1102-0AB50-3BA0	—	—
Illuminated pushbutton · blue · 1 NO + 1 NC	XB4BW36B5, XB5AW36B5, XB5FW36B5, XB5AW36M5, XB4BW36M5, XB5AW36B55	—	—	—
Illuminated pushbutton · clear	ZB4BW17	3SU1152-0AB70-1BA0, 3SU1001-0AB70-0AA0, 3SU1051-0AB70-0AA0	—	—
Illuminated pushbutton · clear · 1 NO	—	3SU1156-0AB70-3BA0, 3SU1152-0AB70-3BA0, 3SU1102-0AB70-3BA0, 3SU1106-0AB70-3BA0, 3SU1106-0AB70-1BA0	—	—
Illuminated pushbutton · green	ZB4BW7A3741, ZB5AW7A3741, ZB5FW333, ZB4BH33, XVUC43, ZB4FW333	3SU1001-0AB40-0AA0, 3SU1051-0AB40-0AA0, 3SU1051-3AB42-0AK0, 3SU1051-3BB42-0AA0, 3SU1001-3AB42-0AA0, 3SU1156-0AB40-3BA0	M22-DL-G, SL4-L230-G, SL7-L230-G, SL7-L120-G, SL7-L24-G, SL7-L24-G-HP	—
Illuminated pushbutton · green · 1 NO	XB6DW3B1B, XB4BP383BM5GEX, XB6CW3B1B	3SU1106-0AB40-3BA0, 3SU1156-0AB40-1BA0	—	—
Illuminated pushbutton · green · 1 NO + 1 NC	XB4BW33B5, XB4BW33M5, XB5AW33B5, XB5AW33M5, XB4BW3365, XB5FW33M5	—	—	—
Illuminated pushbutton · orange	ZB4FW153, ZB5FW153, ZB4BH53	—	SL7-BL230-A, SL4-FL24-A-M, SL4-L120-A, SL4-BL120-A, SL4-BL230-A, SL7-BL24-A	—
Illuminated pushbutton · orange · 1 NO + 1 NC	XB4BW35B5, XB4BW35M5, XB5AW35B5, XB5AW35B55, XB4BW35B55, XB4BW3545	—	—	—
Illuminated pushbutton · red	ZB5FW343, ZB4FW343, ZB4FW143, ZB5AW143, ZB5FW143, ZB4FH043	3SU1001-0AB20-0AA0, 3SB2207-0AC01, 3SU1051-0AB20-0AA0	SL4-FL230-R, SL7-BL230-R, SL7-BL24-R, SL7-L24-R, SL4-BL24-R, M22-DL-R	—
Illuminated pushbutton · red · 1 NC	XB4BP483BM5GEX, XB7NW34M2	3SU1102-0AB20-3CA0, 3SU1156-0AB20-1CA0, 3SU1156-0AB20-3CA0, 3SU1106-0AB20-3CA0	—	—
Illuminated pushbutton · red · 1 NO + 1 NC	XB4BW34B5, XB4BW34M5, XB5AW34B5, XB5AW34M5, XB4BW34G5, XB4BW3465	—	—	—
Illuminated pushbutton · white	XB6DW1B1B, XB6CW1B1B, XB6EDW1B1P, XVUC47, ZB5CW313, ZB4FW313	3SU1102-0AB60-3BA0, 3SU1051-3AB61-0AK0, 3SU1001-3AB61-0AK0, 3SU1051-3AB61-0AA0, 3SU1001-3AB66-0AP0, 3SU1051-3BB61-0AA0	M22-DL-W, SL4-FL230-W, SL7-FL230-W, SL7-L24-W-HP, SL4-BL24-W, SL4-BL120-W	—
Illuminated pushbutton · white · 1 NO	XB4BP183BM5GEX	3SU1152-0AB60-1BA0, 3SU1102-0AB60-1BA0, 3SU1156-0AB60-3BA0, 3SU1106-0AB60-1BA0, 3SU1106-0AB60-3BA0	—	—
Illuminated pushbutton · white · 1 NO + 1 NC	XB4BW31B5, XB5AW31B5, XB4BW31M5, XB4BW31B55, XB4FW31B5, XB4FW31G5	—	—	—

Illuminated pushbutton · yellow	ZB5AW153, XVUC48, ZB4BW383, ZB5AH083, ZB4BH083, ZB5AW383	3SB2206-0AD01, 3SU1001-0AB30-0AA0, 3SU1051-0AB30-0AA0	SL7-BL24-Y, SL4-BL230-Y, SL4-BL24-Y, SL7-BL230-Y, SL7-BL120-Y, SL4-BL120-Y	—
Illuminated pushbutton · yellow · 1 NO	XB4BP583BM5GEX	3SU1106-0AB30-1BA0, 3SU1156-0AB30-3BA0, 3SU1152-0AB30-3BA0	—	—
Mushroom-head pushbutton · black	ZB4BC2, ZBZ28, ZB5AT2, ZB4BS52, ZB5AC24, ZB5AR2	3SU1000-1BD10-0AA0, 3SU1050-1BD10-0AA0	M22-DP-S-X0, M22-DP-S, M22-DP-W-X1, M22-DRP-S	—
Mushroom-head pushbutton · black · 1 NO	XB4BC21, XB5AC21, XB4BC21GEX	—	—	—
Mushroom-head pushbutton · blue	ZB5AC6, ZB4BC6, ZB5AC64, XB4BC61GEX, ZB4BW463, ZB4BC64	—	—	—
Mushroom-head pushbutton · green	ZB5AC3, ZB4BC3, ZB4BW433, ZB5AC34, ZB5AR3, XB4BC31GEX	—	—	—
Mushroom-head pushbutton · orange	XVUC25	—	—	—
Mushroom-head pushbutton · red	ZB5AC4, ZB4BR4, ZB4BW643, XB4BC42GEX, ZB5AC44, ZB4BW443	3SU1000-1BA20-0AA0	M22-DP-R-X0, M22-DRP-R-X0, M22-DP-R	—
Mushroom-head pushbutton · red · 1 NC	—	3SU1100-1BA20-1CA0, 3SU1150-1BA20-3CA0, 3SU1106-0AB201-1CA0	—	—
Mushroom-head pushbutton · white	ZB4BW413	—	—	—
Mushroom-head pushbutton · yellow	ZB5AC5, ZBY9101, ZB4BC5, ZB5AS55, ZB4BS55, ZB4BR5	—	M22-DP-Y, M22-DRP-Y	—
Mushroom-head pushbutton · yellow · 2 NC	XALK178F, XALK188F	—	—	—
Emergency stop (turn / pull / key release) · black	—	3SB2000-1AB01	M22S-PVL	—
Emergency stop (turn / pull / key release) · grey · 1 NC	XB5AS84425	—	—	—
Emergency stop (turn / pull / key release) · grey · 2 NC	XB5AS84445	—	—	—
Emergency stop (turn / pull / key release) · red	XB4BS8444, ZBY9320, XB5AS8445, VCF0, ZB5AS844, ZB4BS844	3SU1150-1HB20-1CA0, 3SU1051-1HB20-0AA0, 3SU1050-1HA20-0AA0, 3SU1150-1HA20-1CG0, 3SU1050-1HB20-0AA0, 3SU1001-1JB20-0AA0	M22-PV/KC11/IY, M22-XGPV, M22-PV, M22-PV/K01, M22-PVS/KC11/IY, M22-XAK3	CE3T-10R-11, CE4T10R01, CE3T-10R-02
Emergency stop (turn / pull / key release) · red · 1 NC	XB4BS8442, XB5AS8442, XB4BS84425, 7517147255, 3606480625053	3SU1150-1HB20-1CG0, 3SU1100-1HB20-1CG0, 3SU1100-1HB20-1CF0, 3SU1100-1HB20-3CH0, 3SU1150-1HA20-1FG0, 3SU1150-1HB20-3CH0	—	—
Emergency stop (turn / pull / key release) · red · 1 NO	XB4BT845GEX, XALK178GTH29	—	—	—
Emergency stop (turn / pull / key release) · red · 1 NO + 1 NC	XB4BS8445, XB4BT845, XALK178E, XB4BS9445, XB4BS84455, XB5AS9445	—	M22-PV/K11	—
Emergency stop (turn / pull / key release) · red · 1 NO + 2 NC	XB4BS844415	—	—	—
Emergency stop (turn / pull / key release) · red · 2 NC	XALK178G, XY2CH13290H29, XB6AS8349B, XB4BS84445, XY2CH13190H7, XY2CH14290H7TK	3SU1150-1HA20-3PH0, 3SU1152-1GB20-3PW0, 3SU1150-1HB20-3PH0, 3SU1100-1HB20-1PG0, 3SU1150-1HB20-1PA0	—	—
Emergency stop (turn / pull / key release) · red · 2 NO	7517147831	—	—	—
Emergency stop (turn / pull / key release) · white · 1 NO + 1 NC	XB5AS84W3B5, XALK84W3BE	—	—	—

Emergency stop (turn / pull / key release) · white · 1 NO + 2 NC	XALK84W3BG, XB5AS84W3B41	—	—	—
Emergency stop (turn / pull / key release) · yellow	ZB6Y7330	—	—	—
Emergency stop (turn / pull / key release) · yellow · 1 NC	—	3SU1801-0NA00-2AC2, 3SU1851-0NB00-2AC2, 3SU1801-0NA00-2AA2, 3SU1851-0NA00-2AC2, 3SU1851-0NA00-2AA2, 3SU1801-0NB00-2AC2	—	—
Emergency stop (turn / pull / key release) · yellow · 2 NO	XACA2074	—	—	—
Selector switch (2- / 3-position, knob or key) · amber	—	3SU1052-2BF00-0AA0	—	—
Selector switch (2- / 3-position, knob or key) · black	ZB5AD2, ZB4BD2, ZB5AD3, ZB4BD3, ZA2BD2, ZB5AD8	—	—	C3SS1-10B-20, C2SS1-10B-20
Selector switch (2- / 3-position, knob or key) · black · 1 NO	XB4BD21, XB5AD21, XB4BG21, XB5AG21, XB4BG41, XB4BJ21	—	—	—
Selector switch (2- / 3-position, knob or key) · black · 1 NO + 1 NC	XB4FD25, XB6AD235B, XB5FD25, XB4BD255, XB4BD25GEX	—	—	—
Selector switch (2- / 3-position, knob or key) · black · 2 NO	XB4BD33, XB4BD53, XB5AD33, XB4BG33, XB4BJ33, XB4BG03	—	—	—
Selector switch (2- / 3-position, knob or key) · blue	ZB4BK1263, ZB5AK1263, ZB5AK1363, ZB4BK1863, ZB4BK1763, ZB5FK1863	3SU1002-2BF50-0AA0, 3SU1002-2BC50-0AA0	M22-WLK-B, M22-WRLK-B	—
Selector switch (2- / 3-position, knob or key) · green	ZB4BK1333, ZB4BK1233, ZB5AK1233, ZB5AK1333, ZB5AK1533, ZB4BK1833	3SU1002-2BF40-0AA0, 3SU1002-2BC40-0AA0	M22-WLK3-G, M22-WRLK3-G	—
Selector switch (2- / 3-position, knob or key) · green · 1 NO + 1 NC	XB4BK123B5, XB4BK123M5, XB4FK123B5, XB4BK133B5, XB4BK133M5, XB4FK133B5	—	—	—
Selector switch (2- / 3-position, knob or key) · grey · 1 NO	XALD134, XB5AD215	—	—	—
Selector switch (2- / 3-position, knob or key) · grey · 1 NO + 1 NC	XB5AK123B5, XB5AK123M5, XB5FK133B5, XB5AK125M5, XB5AK125B5, XB5AK124M5	—	—	—
Selector switch (2- / 3-position, knob or key) · grey · 2 NO	XB5AD335	—	—	—
Selector switch (2- / 3-position, knob or key) · orange · 1 NO + 1 NC	XB4BK125B5, XB4BK125M5, XB4FK125B5, XB4FK135G5, XB4BK135B5, XB4FK135B5	—	—	—
Selector switch (2- / 3-position, knob or key) · red	ZB4BK1243, ZB5AK1543, ZB4FK1243, ZB4BK1343, ZB5AK1843, ZB5AK1243	3SU1002-2BF20-0AA0, 3SU1002-2BC20-0AA0	M22-WRLK3-R, M22-WRLK-R	M2SS2-11R
Selector switch (2- / 3-position, knob or key) · red · 1 NO + 1 NC	XB4BK124B5, XB4FK124B5, XB4FK124M5, XB4FK134B5, XB4FK134G5, XB4FK134M5	—	—	—
Selector switch (2- / 3-position, knob or key) · white	ZB5AK1213, ZB5AK1313, ZB4BK1813, ZB4BK1313, ZB4BK1213, ZB5AK1413	3SU1002-2BF60-0AA0, 3SU1002-2BL60-0AA0, 3SU1052-2BL60-0AA0, 3SU1052-2BC60-0AA0, 3SU1052-2BF60-0AA0, 3SU1052-2BM60-0AA0	M22-WRLK3-W, M22-WLK3-W, M22-WRLK-W	—
Selector switch (2- / 3-position, knob or key) · white · 1 NC	—	3SU1150-2BF60-3BA0	—	—
Selector switch (2- / 3-position, knob or key) · white · 1 NO	—	3SU1100-2BL60-1NA0, 3SU1150-2BF60-1BA0, 3SU1100-2BF60-3MA0, 3SU1100-2BF60-3BA0, 3SU1150-2BM60-3NA0, 3SU1100-2BL60-3NA0	—	—
Selector switch (2- / 3-position, knob or key) · white · 2 NO	—	3SU1100-2BM60-3NA0	—	—

Selector switch (2- / 3-position, knob or key) · yellow	ZB4BK1253, ZB5AK1253, ZB5AK1353, ZB4BK1583, ZB5AK1283, ZB5AK1483	3SU1002-2BF30-0AA0, 3SU1002-2BC30-0AA0	M22-WLK-Y, M22-WRLK-Y	—
Pilot light · blue	ZB4BV063, ZB5AV063, XB5EVM6, ZB5AV06, ZB4BV06, ZB4FV063	3SU1106-6AA50-3AA0, 3SU1102-6AA50-3AA0, 3SB2001-6BF06	M22-L-B, SL4-L-B, M22-LH-B, SL7-L-B	4373538, 1SFA619403R5024
Pilot light · clear	XB7EV07MP	3SU1156-6AA70-3AA0, 3SU1156-6AA70-1AA0, 3SU1102-6AA70-1AA0, 3SU1152-6AA70-3AA0, 3SU1152-6AA70-1AA0, 3SU1106-6AA70-3AA0	—	—
Pilot light · green	XB4BVB3, ZB4BV033, ZB5AV033, XVL4333, XVL4233, XVL4133	3SU1152-6AA40-1AA0, 3SU1156-6AA40-1AA0, 3SU1102-6AA40-1AA0	M22-L-G, M22-L-G-LED-BVP, L-G, SL4-L-G, 088337, SL7-L-G	1SFA619403R5202, 1SFA619403R5022
Pilot light · grey	XB5FVG3, XB5FVM1, XB5FVM5, XB5FVG1, XB5FVG5	—	—	—
Pilot light · orange	XVLA335, XVL4125, XVL4135, XVL4235, XB4BVB5GEX	—	SL7-L-A, SL4-L-A	—
Pilot light · red	XB4BVB1, ZB4BV043, ZB5AV043, XB4BV64, XVL4334, ZB4BV04	3SU1102-6AA20-1AA0, 3SU1152-6AA20-1AA0, 3SU1156-6AA20-3AA0, 3SB2204-6BC06	M22-L-R, M22-L-R-LED-BVP, L-R, SL7-L-R, M22-LH-R, SL4-L-R	CL2-502R
Pilot light · white	ZB4BV013, ZB4BV01, ZB5AV013, XB5EVB1, ZB4BV013E, ZB4BV013S	3SU1102-6AA60-1AA0, 3SU1156-6AA60-3AA0, 3SU1106-6AA60-3AA0	M22-L-W, M22-LH-W, SL7-L-W, SL4-L-W	—
Pilot light · yellow	XB4BVB5, ZB4BV053, ZB5AV053, ZB4BV083, XB5EVB8, ZB5AV083	3SU1102-6AA30-3AA0, 3SU1156-6AA30-3AA0, 3SU1102-6AA30-1AA0, 3SU1152-6AA30-3AA0, 3SB2204-6BD06	M22-L-Y, M22-LH-Y, SL7-L-Y, SL4-L-Y	1SFA619403R5023
Double-headed pushbutton · black	—	3SU1000-3AB11-0AA0	—	—
Double-headed pushbutton · green	ZB4BA7341	3SU1050-3AB42-0AA0, 3SU1050-3BB42-0AA0	—	—
Double-headed pushbutton · green · 1 NO	A9E18034	—	—	—
Double-headed pushbutton · green · 1 NO + 1 NC	XB5AL73415, XB4BL73415, XB5AL734155, XB4BL734155	—	—	—
Double-headed pushbutton · grey · 1 NO	A9E18035	—	—	—
Double-headed pushbutton · white	ZB4BA7120	3SU1050-3AB66-0AM0, 3SU1000-3AB61-0AA0, 3SU1000-3BB61-0AA0, 3SU1000-3AB66-0AL0, 3SU1000-3AB66-0AM0, 3SU1050-3BB61-0AA0	CWIZ-02/48	—

Part numbers and designations are those of the original manufacturers and are given for identification. cBallast is an independent supplier. © cBallast 2026 · cballast.com