



Original instructions

DTV200S

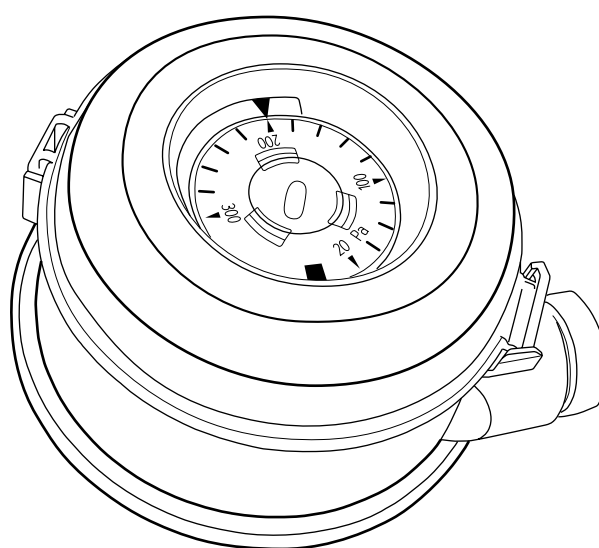

DTV200S

Mått / Dimensions / Mål / Dimensions / Abmessungen / Dimensiones / Afmetingen
/ Dimensioni / Wymiary / Основные размеры

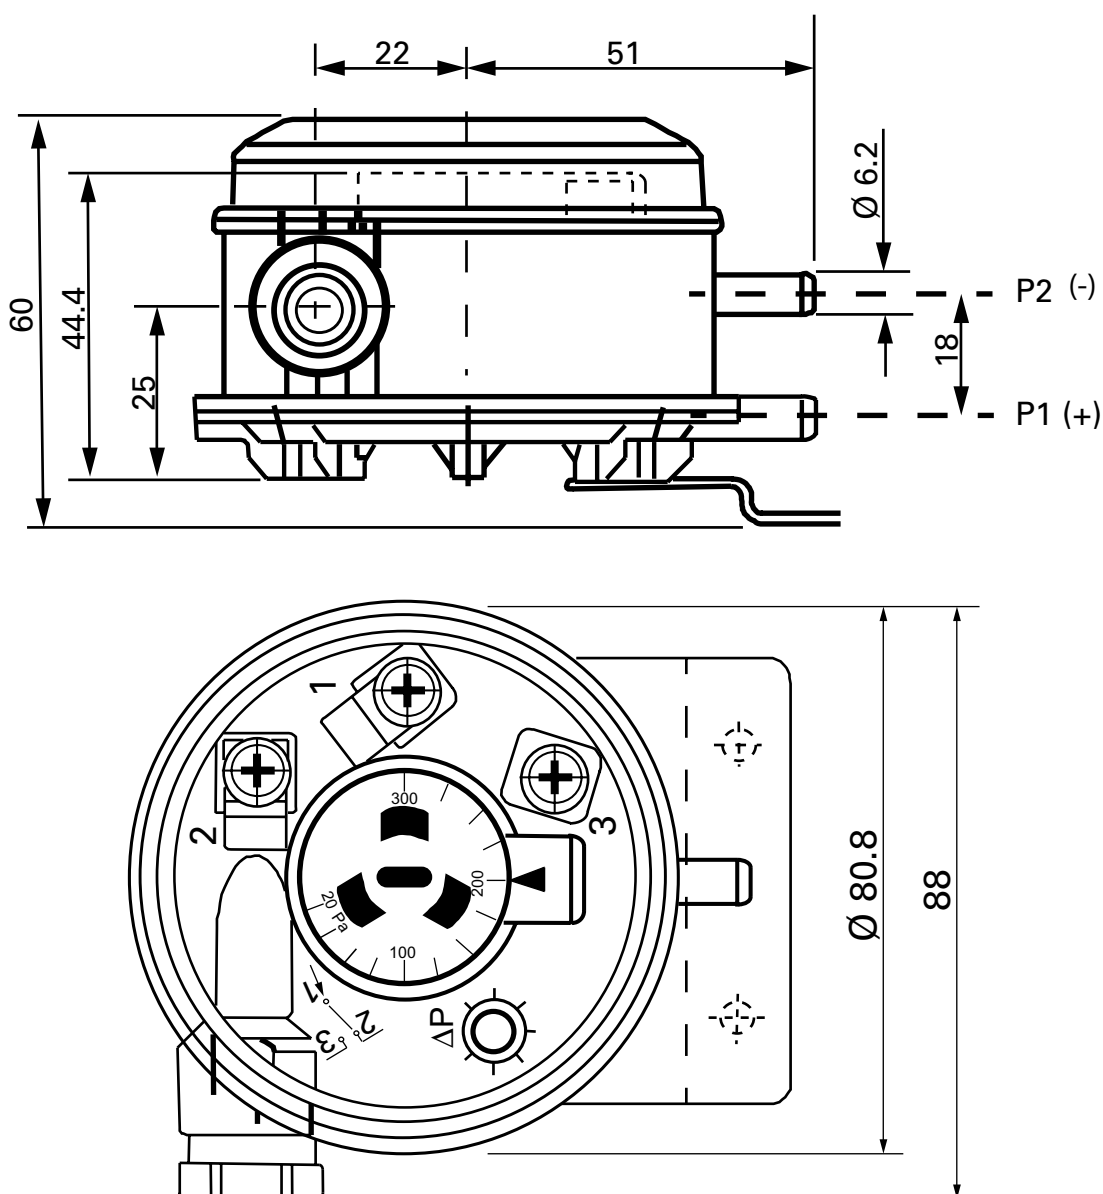


Rekommenderad inställning / Recommended settings / Anbefalte innstillinger /
Anbefalede indstillinger/ Réglages recommandés / Empfohlene Einstellungen /
Ajustes recomendados / Aanbevolen instellingen / Impostazioni raccomandate/
zalecane ustawienia / Рекомендуемые настройки


Fan speed	ΔP [Pa]	Performance reduction
max	240	10-20%

DTV200S

Installation / Installation / Installasjon / Raccordement / Installation / Instalación /
Installatie / Installazione / Podłączenie / Подключения

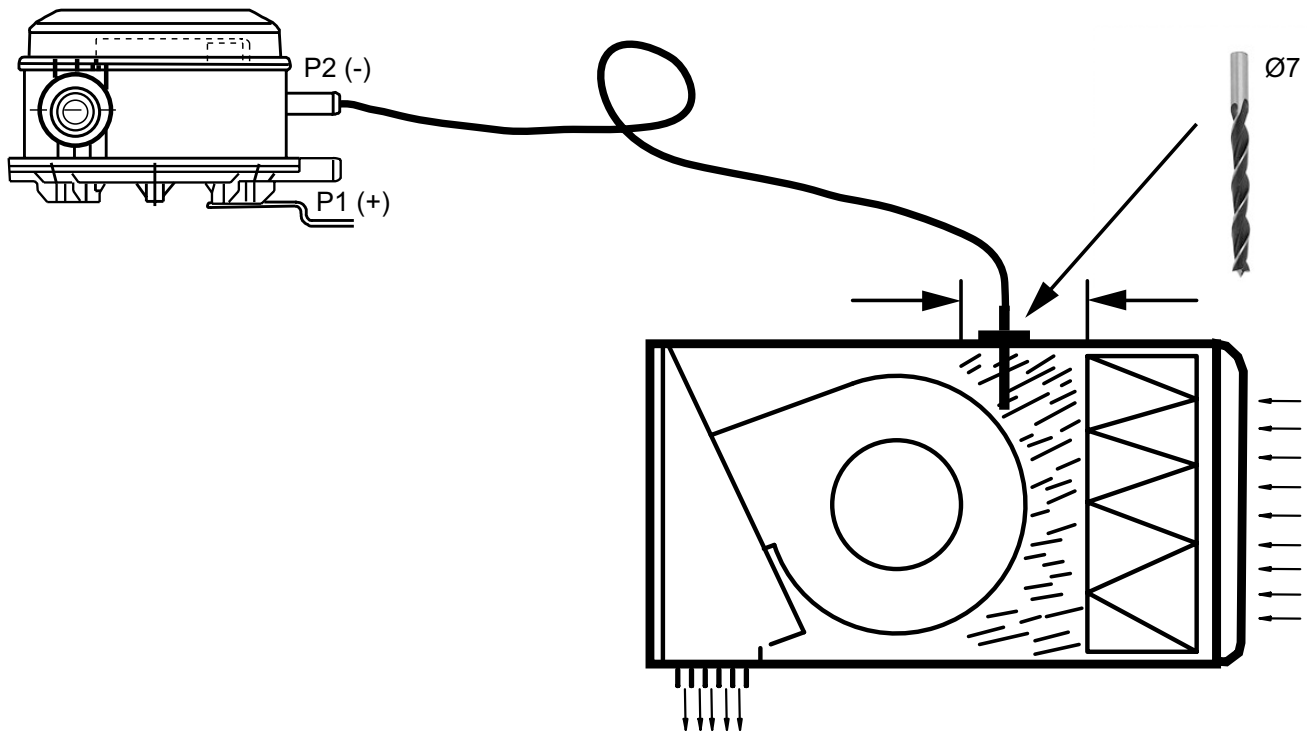


DTV200S + SIRE

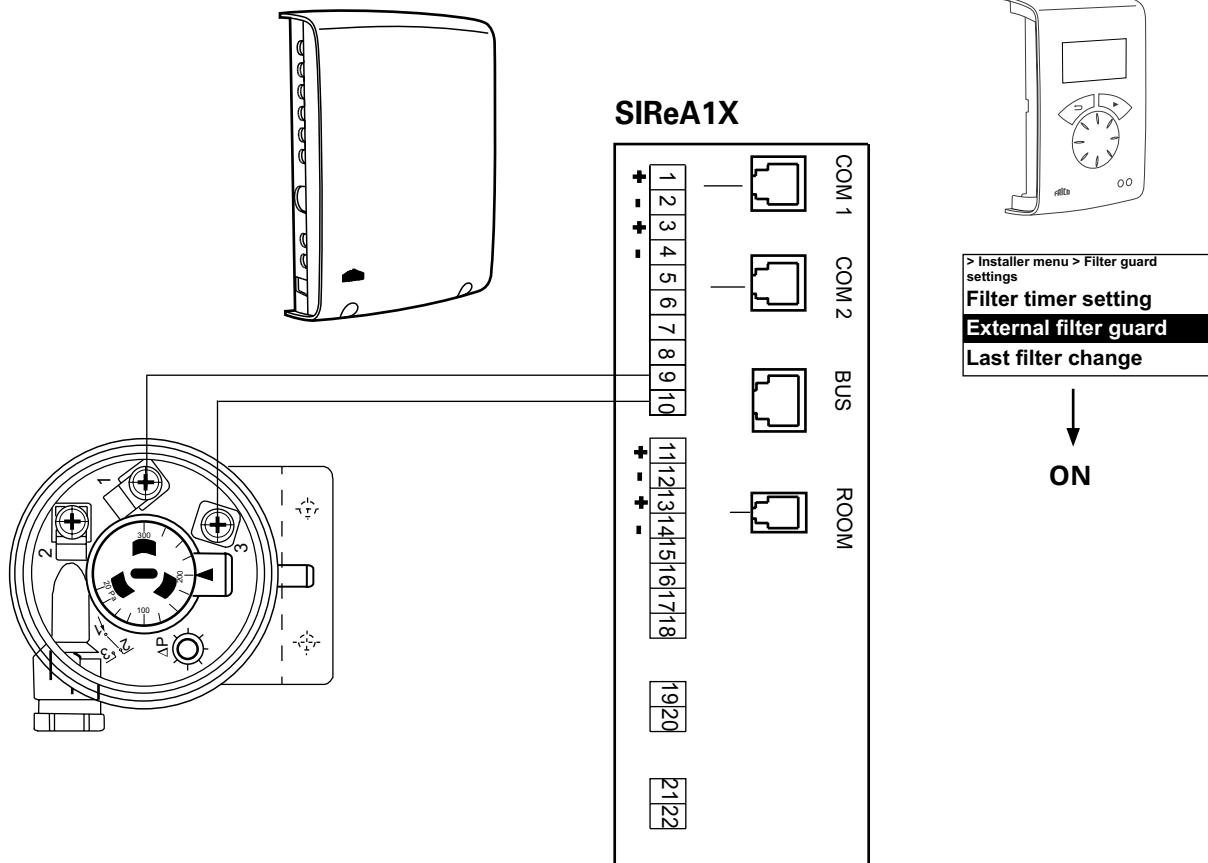

DTV200S

DTV200S + FCSA, FCPA, FCBPA

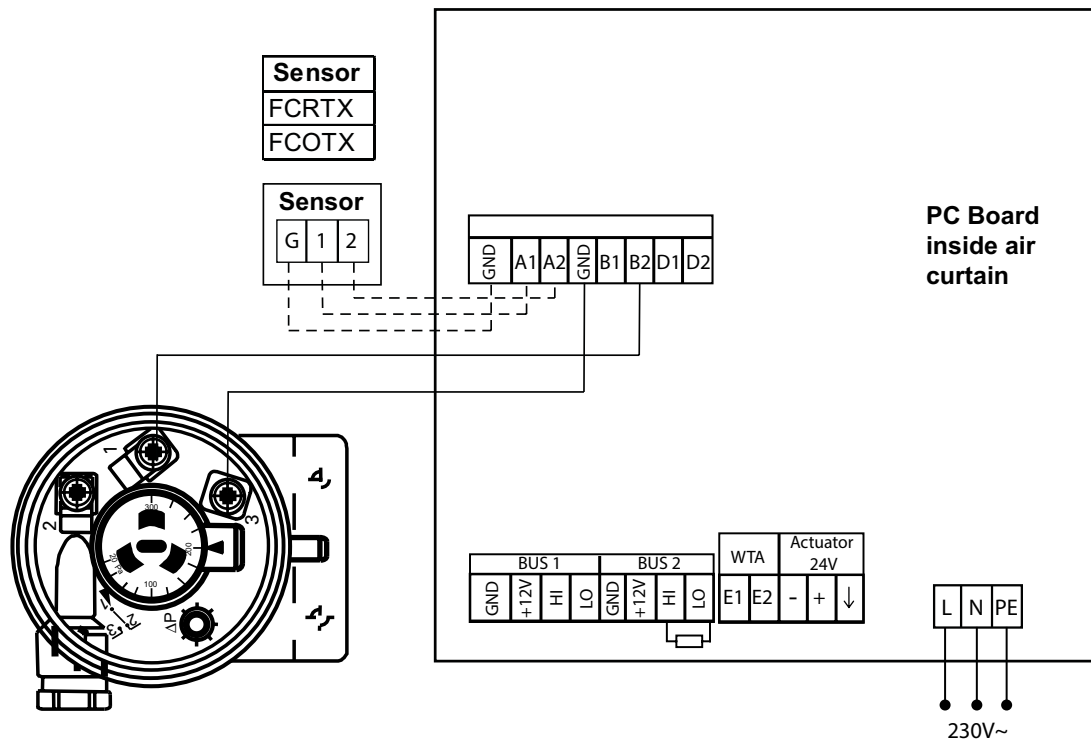

Set up in
Setup Guide

1. Install in In A or B
2. Set up in Setup guide
3. Set parameter 771 = 2 (sensor)



Main office

Frico AB
Industrivägen 41
SE-433 61 Sävedalen
Sweden

Tel: +46 31 336 86 00

mailbox@frico.se
www.frico.net

**For latest updated information and information
about your local contact: www.frico.net**