



SERVICE PARTS LIST

BULLETIN NO.
54-40-2672

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS		REVISED BULLETIN	DATE
M18™ SAWZALL® Reciprocating Saw		54-40-2671	Aug. 2017
CATALOG NO.	2621-20	STARTING SERIAL NO.	G09C
		WIRING INSTRUCTION SEE PAGE 4	

EXAMPLE:
Component Parts (Small #) Are Included
When Ordering The Assembly (Large #).

★ = Part number change from
previous service parts list.


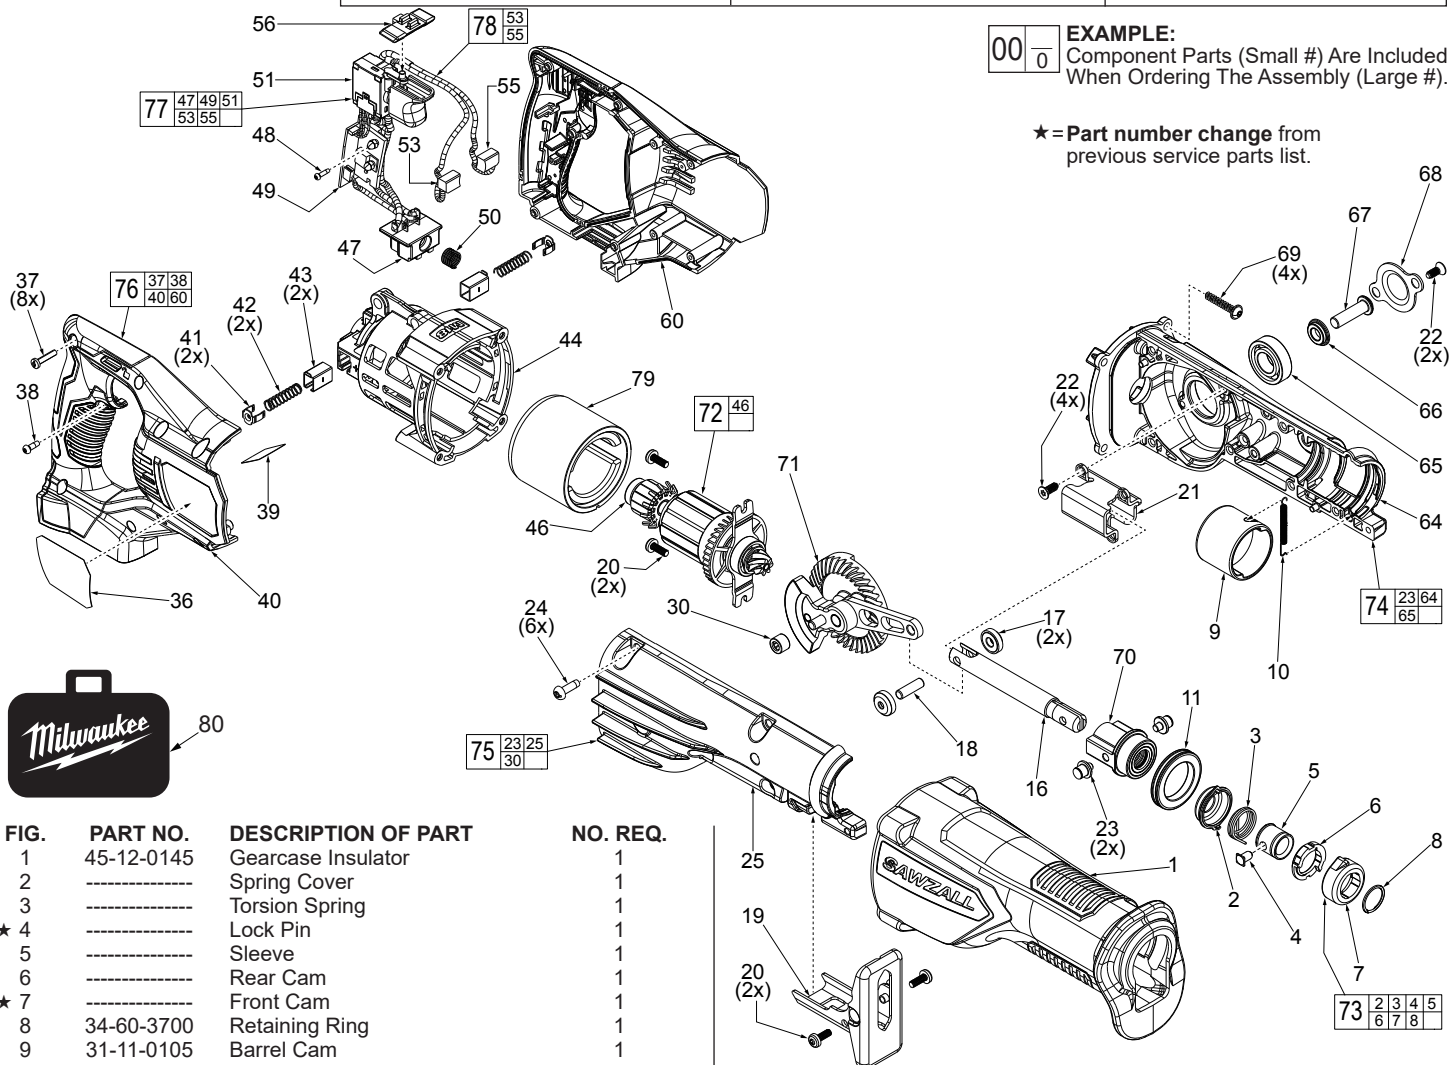


FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	45-12-0145	Gearcase Insulator	1
2	-----	Spring Cover	1
3	-----	Torsion Spring	1
★ 4	-----	Lock Pin	1
5	-----	Sleeve	1
6	-----	Rear Cam	1
★ 7	-----	Front Cam	1
8	34-60-3700	Retaining Ring	1
9	31-11-0105	Barrel Cam	1
10	40-50-8805	Extension Spring	1
11	45-06-0230	'H' Orbit Seal	1
16	38-50-0076	Spindle	1
17	42-40-2052	Rollers	2
18	06-65-0145	Pin - Connecting Rod	1
19	45-16-0125	Shoe Assembly	1
20	06-82-5324	10-24 x 1/2" Pan Hd. Tapt. T-25 Screw	4
21	43-56-0045	Orbit Slot	1
22	06-82-8890	DG50 x 1.22 x 12.7 T-25 Screw	6
23	06-65-0135	Pivot Pin	2
24	06-82-5411	10-24 x .625 Pan Hd. Tapt. T-25 Screw	6
25	-----	Gearcase - Right	1
30	02-50-1611	Needle Bearing	1
36	12-20-0047	Service Nameplate	1
37	06-82-7261	6-19 x 16mm Pan Hd. Plast. T-15 Scr	8
38	05-88-1610	M3.5 x 10 Pan Hd. Plastite T-10 Screw	1
39	10-15-0955	Warning Label	1
40	-----	Right Handle Halve	1
41	22-32-0400	Brush Spring Clip	2
42	40-50-8840	Brush Spring	2
43	22-20-0860	Brush Tube	2
44	31-50-0037	Motor Housing	1
46	02-04-0645	Ball Bearing	1
47	-----	Battery Connector Block	1
48	06-82-2395	M2.6 x 10mm Pan Hd. Tapt. T-8 Screw	1
49	-----	PCBA	1
50	40-50-1090	Connector Block Spring	1
51	-----	On-Off Switch	1
53	-----	Carbon Brush - Red	1
55	-----	Carbon Brush - Black	1

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
56	42-42-0092	Lockoff Shuttle	1
60	-----	Left Handle Halve	1
64	-----	Gearcase Assy. - Left w/ Locating Pins	1
65	02-04-1516	Ball Bearing	1
66	42-40-0078	Spacer	1
67	06-08-0019	Drive Hub Bolt (Left Hand Thread)	1
68	44-66-0280	Bearing Retaining Plate	1
69	05-88-8309	M5 x 35mm Pan Hd. Tapt. T-20 Screw	4
70	44-86-0052	Spindle Bushing Assembly	1
71	14-09-1005	Crankshaft Assembly	1
72	16-01-2622	Armature Assembly	1
★ 73	14-46-1064	Quik-Lok® Blade Clamp Assembly	1
74	14-30-0062	Gearcase Assembly - Left	1
75	14-30-0072	Gearcase Assembly - Right	1
76	14-34-0132	Handle Assembly	1
77	14-20-0147	Electronics Assembly	1
78	22-18-0082	Carbon Brush Assembly (Set of 2)	1
79	18-01-2622	Field Assembly	1
80	42-55-2621	Carrying Case	1

SEE ADDITIONAL SERVICE NOTES ON FOLLOWING PAGES

MILWAUKEE TOOL • www.milwaukeetool.com
13135 W. LISBON RD., BROOKFIELD, WI 53005
Drwg. 1


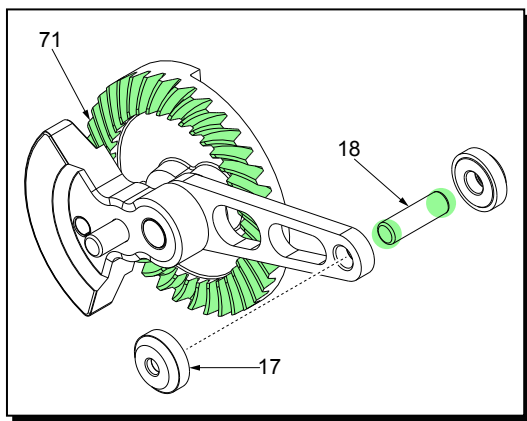


Pinion Gear of Armature Assy. #72

NOTE: Counter Weight of Crankshaft Assembly #71 has been removed for clarity (to reveal pinion gear)


NOTE: Orbit Slot #21 has been removed from this view for clarity (to reveal Connecting Rod Pin #18 and Rollers #17)

When securing the orbit slot (21), tighten screws (22) in the order shown.

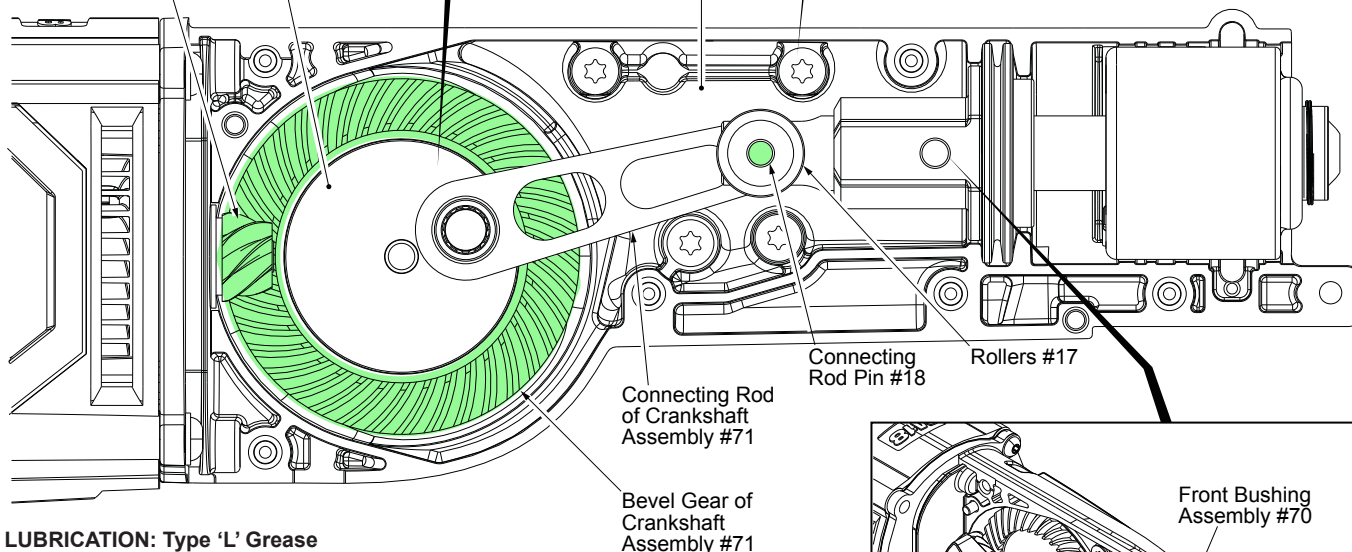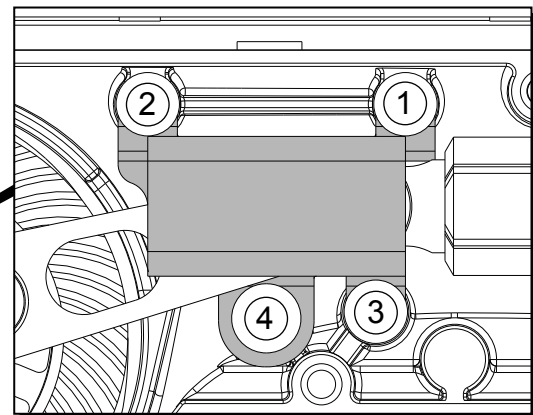



LUBRICATION: Type 'L' Grease No. 49-08-4175 (16 oz. tub)

- Place 30g $\pm$ 3g (approx. 1 ounce) on top of bevel gear of Crankshaft Assembly (71) and pinion gear of armature assembly (72), being sure to cover the middle of the gear and all teeth.
- Place 15g $\pm$ 3g (approx. .5 ounce) to the area where the bevel gear and connecting rod of crankshaft assembly (71) interface.
- Lightly coat both pivot pins (23) where connections go into holes of front bushing assembly (70).
- Lightly coat both ends of pin (18) prior to installing rollers (17).

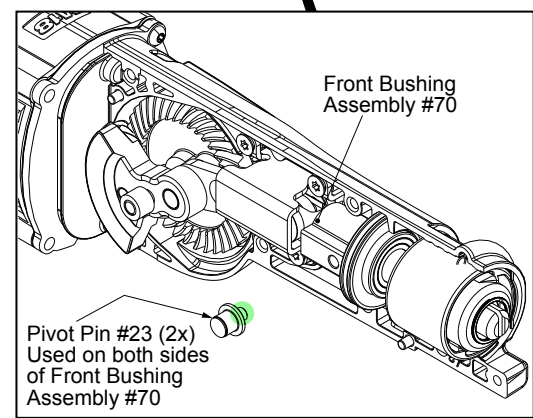

BACK VIEW

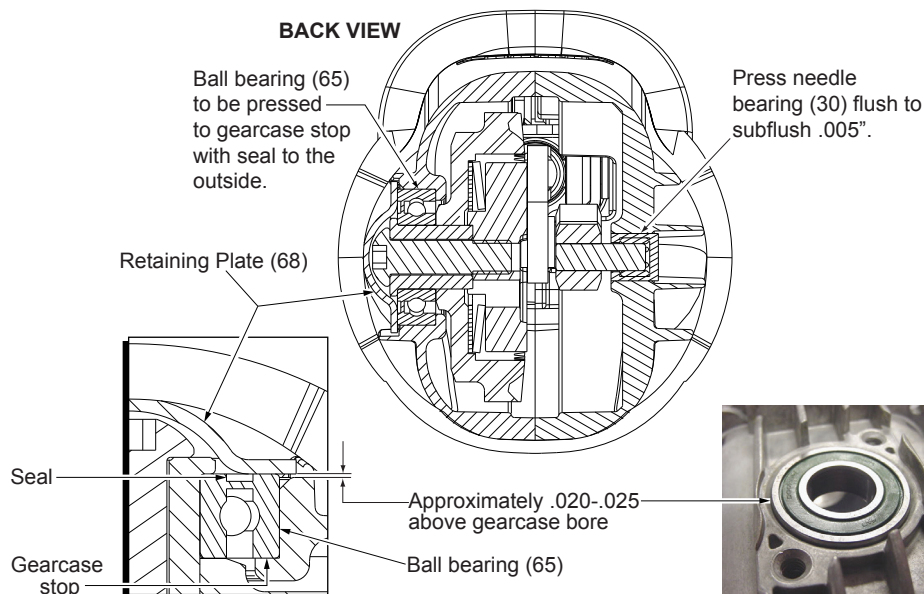

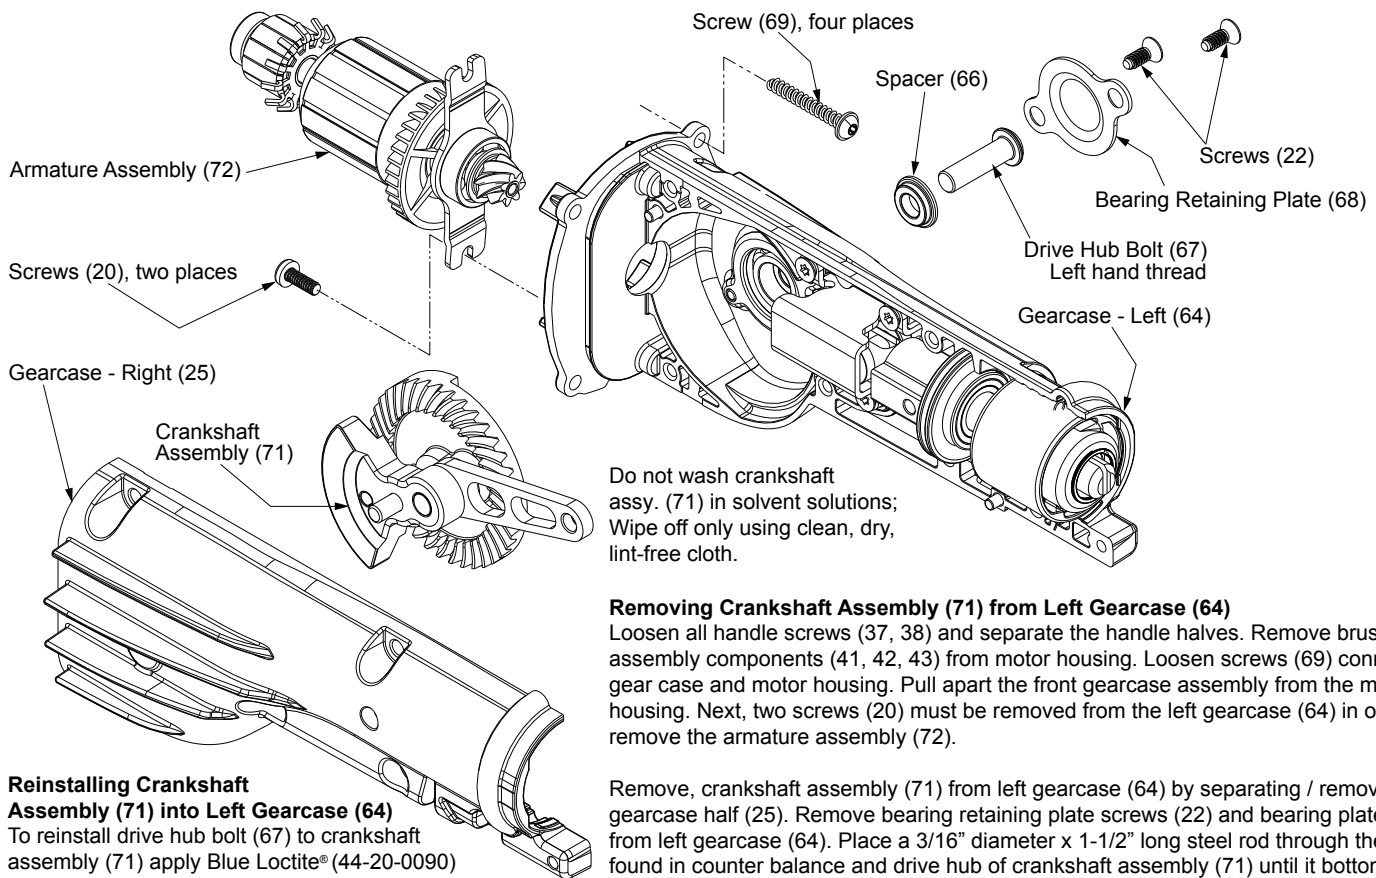

Reinstalling Crankshaft Assembly (71) into Left Gearcase (64)



To reinstall drive hub bolt (67) to crankshaft assembly (71) apply Blue Loctite® (44-20-0090) to threads above spacer (66) aligning threads of drive hub bolt (67) with internal threads of crankshaft assembly hub. Use a T-40 torx drive to turn the drive hub bolt (67) slowly in a counter clockwise direction until 3/16" steel pin rest against crankshaft assembly connecting rod (See 'Removing Crankshaft Assembly' instructions above). Using an inch pound torque wrench and a T-40 torx drive, torque drive hub bolt (67) to 65-75 in. lbs.

Removing Crankshaft Assembly (71) from Left Gearcase (64)

Loosen all handle screws (37, 38) and separate the handle halves. Remove brush assembly components (41, 42, 43) from motor housing. Loosen screws (69) connecting gear case and motor housing. Pull apart the front gearcase assembly from the motor housing. Next, two screws (20) must be removed from the left gearcase (64) in order to remove the armature assembly (72).

Remove, crankshaft assembly (71) from left gearcase (64) by separating / removing right gearcase half (25). Remove bearing retaining plate screws (22) and bearing plate (68) from left gearcase (64). Place a 3/16" diameter x 1-1/2" long steel rod through the holes found in counter balance and drive hub of crankshaft assembly (71) until it bottoms out.

Next place a T-40 torx drive into drive hub bolt (67) and turn drive hub bolt slowly in a clockwise direction until 3/16" steel pin rest against crankshaft assembly connecting rod. The T-40 torx drive can now be forcibly turned clockwise to loosen and remove drive hub bolt (67).

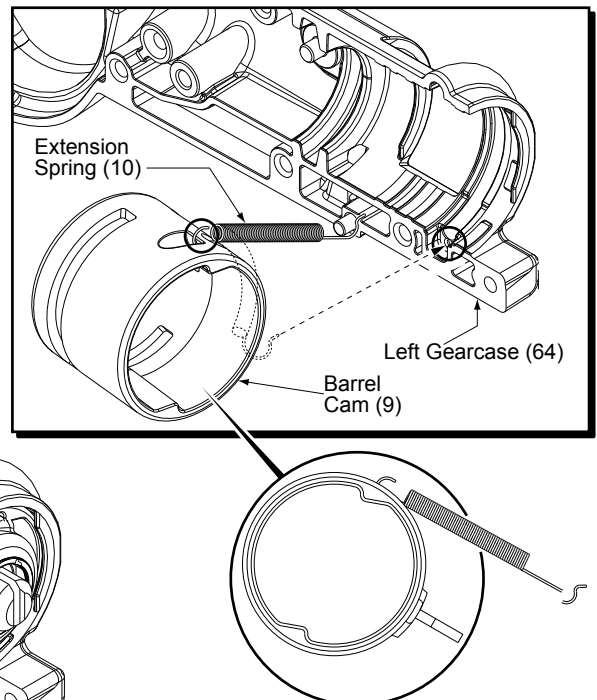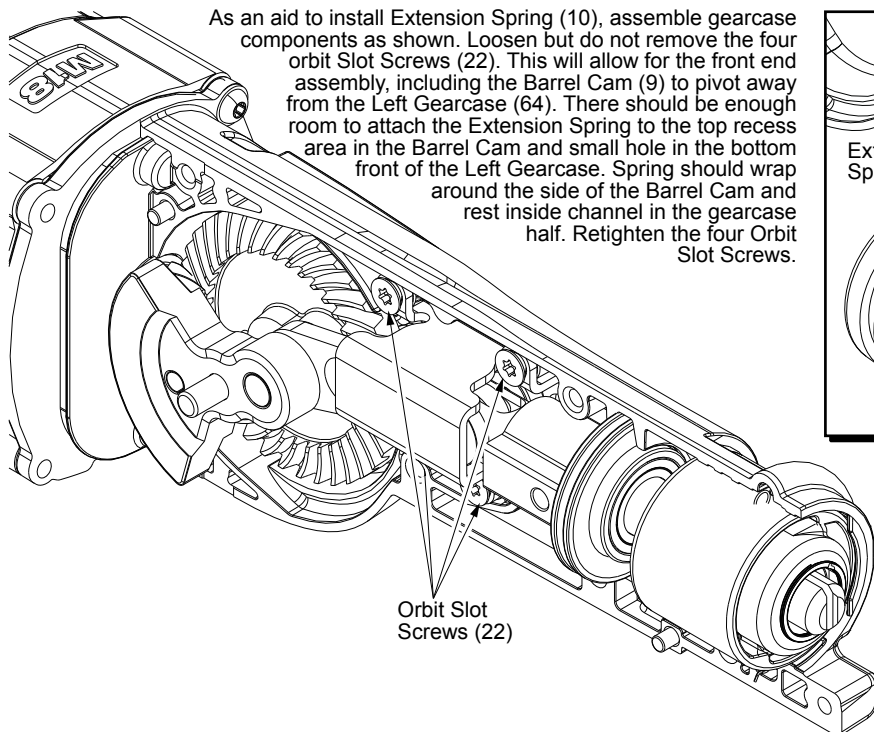


REMOVING THE STEEL QUIK-LOK® BLADE CLAMP -

- Remove external retaining ring (8) and pull front cam (7) off.
- Pull lock pin (4) out and remove remainder of parts and discard.

REASSEMBLY OF THE STEEL QUIK-LOK® BLADE CLAMP

- Coat new lock pin with powdered graphite.
- Hold tool in a vertical position.
- Place spring cover onto spindle.
- Slide torsion spring (3) onto spindle with spring leg on hole side of spindle.
- Slide sleeve (5) onto spindle aligning hole on sleeve with hole in spindle.
- Slide rear cam over sleeve until it bottoms on sleeve shoulder, ensure spring leg inserts into groove of cam.
- Rotate rear cam in the direction of the arrows located on spring cover until there is clearance for lock pin (4) to be inserted into sleeve/spindle holes. Insert lock pin.
- Align front cam (7) inner ribs with rear cam outer slots and slide front cam onto sleeve until it bottoms. Retaining ring groove should be completely visible.
- Attach retaining ring (8) by separating coils, inserting end of ring into groove. Wind remainder of ring into groove. Ensure ring is seated in groove.
- Blade clamp should rotate freely. During normal usage, debris may not allow blade clamp to rotate freely. The use of spray lubricant can help free blade clamp. In extreme conditions, follow these instructions to remove, clean and reassemble blade clamp.

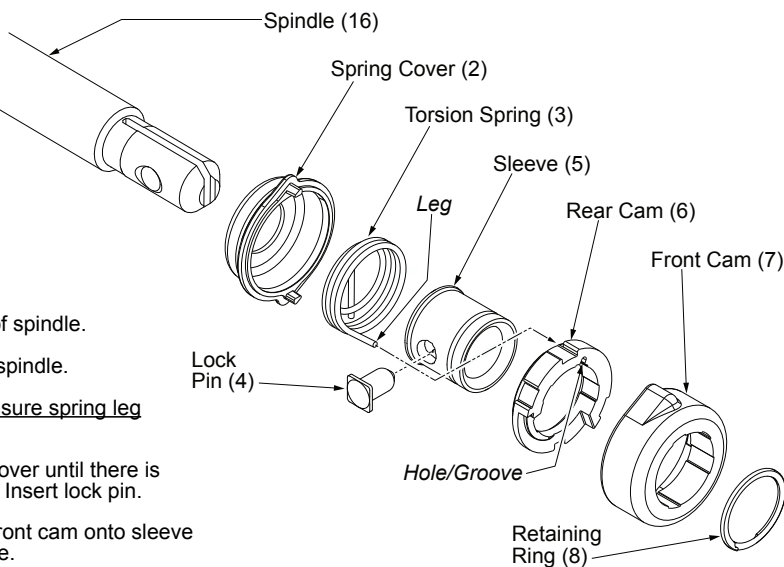

WIRING DIAGRAM

