


INTENDED USE

This table summarizes the radius of our OE100 Flexi Riser FR1 to FR6.


Use this guide to identify how many segments you need for your given radius requirements.

For installation instructions please see ØI-RD-UG-EN-0012.

Description	Nr. of segments	Radius of Riser (mm)							
		90°		60°		45°		30°	
		Inside Riser	Outside Riser	Inside Riser	Outside Riser	Inside Riser	Outside Riser	Inside Riser	Outside Riser
OE100 FR1	1	390	350	580	550	770	760	1140	1180
OE100 FR2	2	590	540	870	840	1150	1150	1700	1760
OE100 FR3	3	780	730	1170	1110	1550	1500	2320	2260
OE100 FR4	4	970	920	1450	1400	1930	1880	2890	2830
OE100 FR5	5	1170	1110	1740	1690	2320	2260	3460	3410
OE100 FR6	6	1360	1300	2030	1970	2700	2640	4030	3980

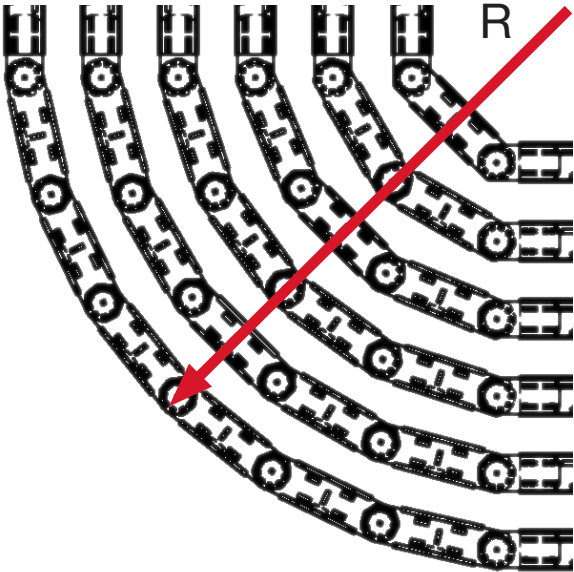

Inside riser 90° - FR1 to FR6

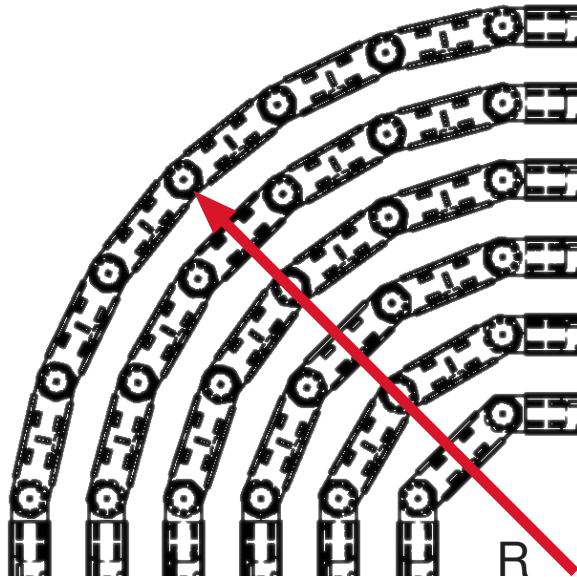

Outside riser 90° - FR1 to FR6