



1

Holding the larger chain breaker in a vice or holding device is recommended. Leave both hands free to handle the chain.

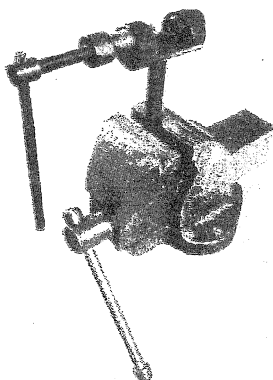


2

Screw back the jack screw to clear the clamping area and clamp the chain, making sure it is aligned properly

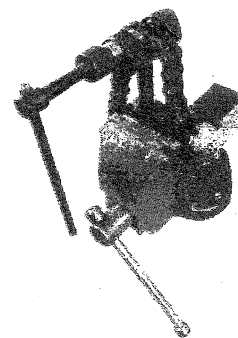


3

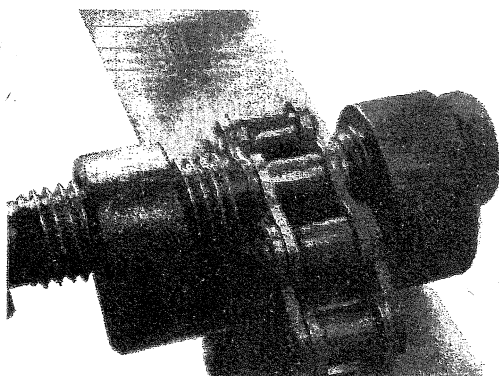


4

This shows the breaker pin driving the chain pin out of the chain. The clamp screw has been screwed back slightly just for illustration purposes. Normally the clamp screw would be screwed up to the chain.

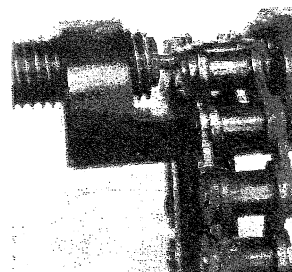


5

If the chain was invisible this is what you would see.

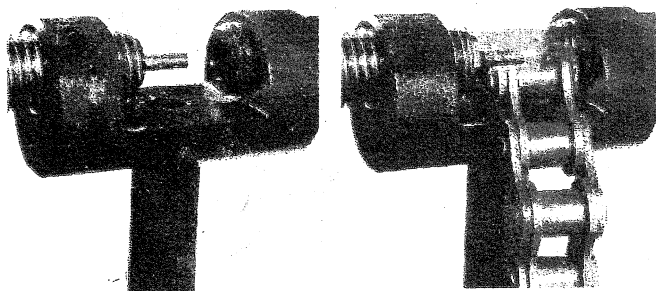


6

The chain pin will eventually be driven out of the chain. As soon as you feel the resistance of the pin cease STOP!! This means the pin is clear of the chain, no further jacking is necessary

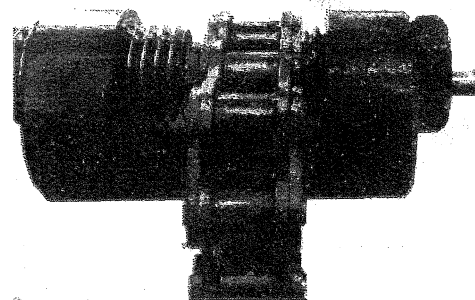

7

Screw the jackscrew back and release the clamp and the chain will separate.

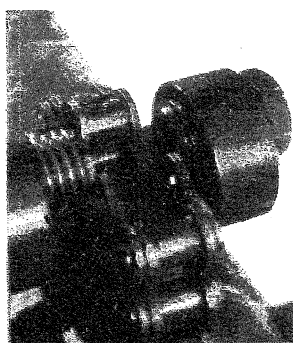

8

