

Air conditioner

User & Installation manual

WindFree 1-Way Cassette Panel

- Thank you for purchasing this Samsung air conditioner.
- Before operating this unit, please read this manual carefully and retain it for future reference.

Installing the WindFree 1-Way Cassette Panel

If the WindFree function is not visible on the upper-level controller after connecting the WindFree panel:

- Check if the software of the upper-level controller is the latest version.
 - If the software is not the latest version, update to the latest version.
 - If the software of the upper-level controller is the latest version but the WindFree function is not visible on it, perform tracking again on the upper-level controller or reset its power.
- ※ Upper-level controller: DMS, Touch Centralized Controller or another device

Accessories

Item	M4x25 screw	User & Installation manual (1)
Shape	 PC1MWFMANW : (5) PC1NWFMANW : (6) PC1BWFMANW : (7)	

Item	Screw	Tightening torque (N·m)
Shape	M4 L 25 mm	1.2~1.8 (N·m)

(1 N·m = 10 kgf·cm)


CAUTION

- After installing the product, explain to the user how to use the air conditioner.

Installing the panel


CAUTION

- Handle the panel carefully.
 - Do not lean the panel against a wall or place it on a protruding object.
Failing to do so may damage the surface of the panel.
 - Be careful when installing the air inlet panel by hand. You may get hurt.
- 1 Fix the panel by engaging the latches at both sides onto the grooves on both sides of the indoor unit.

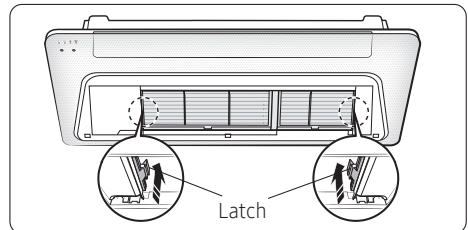


- 2 Open the screw cover on the air outlet, insert and fasten the panel fixing screws. If the screws are not fastened completely, it may produce a gap between the indoor unit and the panel, resulting in condensation.


PC1MWFMANW

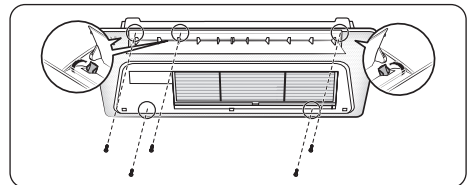


PC1NWFMANW

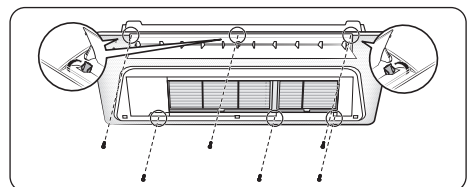

PC1BWFMANW

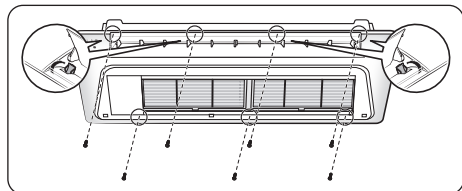


- 3 Press the handle of the air filter and pull it out.
- The handle appearance of the air filter may differ, depending on the model. Refer to the image.

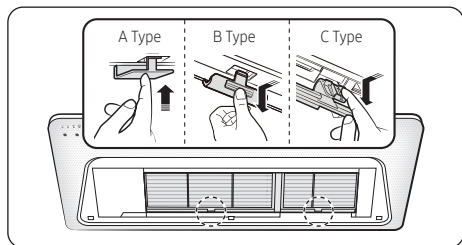

- 4 Perform wiring between the indoor unit and the panel:
- Unfasten the 3 screws from the electrical part, and then remove the electrical part.
- Connect the connectors on the panel to the connectors on the indoor unit PCB:
 - Connect the connectors of the swing motor, remote control sensor, and humidity sensor, Wi-Fi module on the panel to their respective connectors on the indoor unit PCB.
 - Make sure that the colors of the connectors match each other.
- Reassemble the electrical part.

- Close the air filter.

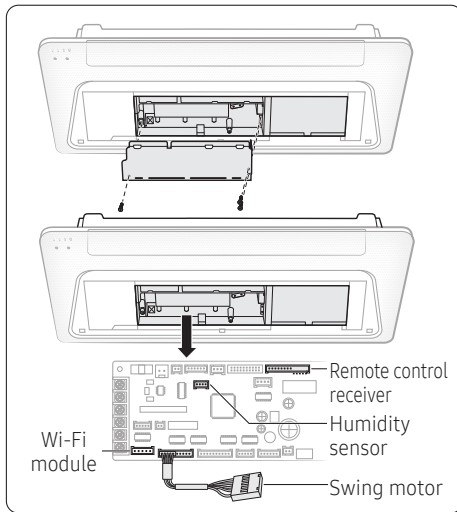



NOTE

- If any connector is not connected or is connected to a different color connector, both the air conditioner and the remote control will not operate.
- 5 Check whether the panel is firmly fixed to the indoor unit.
 - Make sure that the screws are fastened tightly until there is no gap between the ceiling and the panel, and that the panel is installed in parallel with the ceiling and the ceiling joints:
 - If there is a gap between the ceiling and the panel, adjust the height of the indoor unit.

Installing the WindFree 1-Way Cassette Panel

⚠ CAUTION

- If the panel is installed incorrectly onto the cassette, air may leak out.

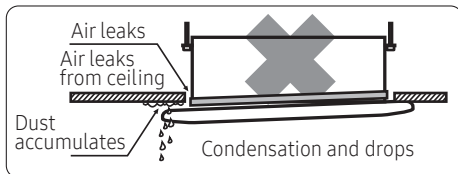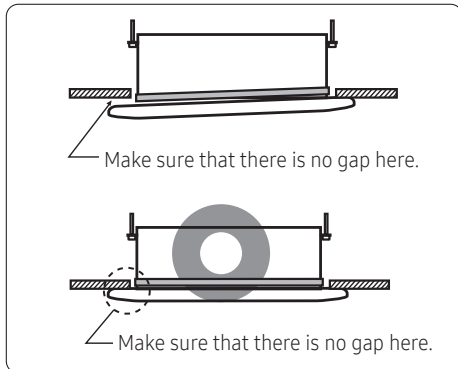


Incomplete installation (fastening) produces the problems as shown in the figure. Be sure to check again after the installation.


- When installing the panel, if there are any gaps between the panel and the indoor unit due to incomplete installation (fastening), air and condensation water may leak into the room. Be sure to remove gaps by using the indoor unit installation gauges (on the pattern sheet for installation).
 - For detailed specifications, refer to the installation manual for the product.

(Unit: mm)

Slim 1 way cassette (Small, WindFree panel)

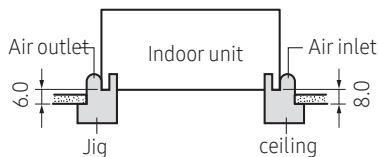


Slim 1 way cassette (Medium/Large, WindFree panel)

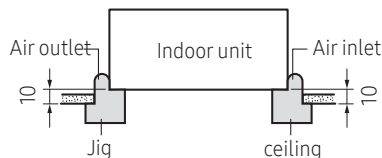

6 Connect the grill.

- Hook the 2 panel safety hooks onto both sides of the grill.
- Push the [PUSH] sign to fix the grill.

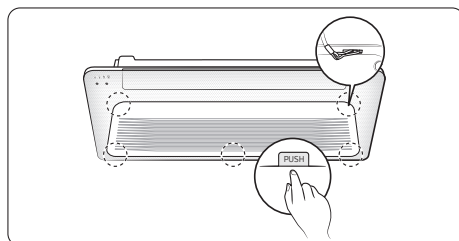

NOTE

- Before working on the grill, be sure to hook the panel safety hooks onto both sides of the grill to prevent it from falling during work.

SmartThings app

To use the SmartThings app, connect the product to the network in the sequence described below. The images shown may differ depending on your smartphone model, OS version and manufacturer. You need to set up the Wi-Fi access point only when connecting the product to a Wi-Fi network. Once the product is connected, you can use the SmartThings app via Wi-Fi, 3G, LTE, 5G or more wireless networks.

1 Checking the power connections

Check if the power is connected to the product and the access point.

2 Setting up and connecting to a Wi-Fi access point using your smartphone


1 To connect the product to a Wi-Fi network, turn on Wi-Fi at "Settings > Wi-Fi", and then select the access point to connect to

- Only alphanumeric characters are supported for wireless access point names (SSIDs). If an SSID has a special character, rename it before connecting to it.
- This product supports only Wi-Fi 2.4 GHz.



2 Turning off "Switch to mobile data" at "Settings > Wi-Fi" on your Smartphone

- If "Switch to mobile data" or "Adaptive Wi-Fi" is turned on, you cannot connect to the network. Be sure to turn off these functions before connecting to the network.

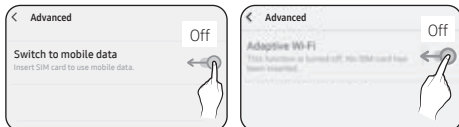

NOTE

- The setup may differ depending on your smartphone model, OS version and manufacturer.

3 Checking the Internet connectivity

- After connecting to Wi-Fi, check that your smartphone is connected to the Internet.

NOTE

- A firewall may prevent your smartphone from connecting to the Internet. Contact your Internet service provider for troubleshooting.

3 Downloading the SmartThings app and registering your Samsung account

1 Downloading the SmartThings app

- Search for "SmartThings" on Play Store or App Store, and download the SmartThings app to your smartphone.
- If the SmartThings app is already installed on your smartphone, update it to the latest version.

NOTE

- The SmartThings app supports Android OS 7.0 or later (with at least 2 GB RAM) and iOS 12.0 or later. The app is optimized for iPhone 6s or later and Samsung smartphones (Galaxy S and Note series). The updates of the SmartThings app or the functions supported by it may be discontinued for the previously supported OS versions due to reasons such as usability and security.
- The SmartThings app may change without prior notice to improve product usability and performance.

SmartThings app

2 Registering your Samsung account

- A Samsung account is required to use the SmartThings app. To create your Samsung account and log in to your account, follow the instructions displayed on the SmartThings app. You do not need to install an additional app.


NOTE

- If you already have a Samsung account, log in to the account. If you have a smartphone that is a Samsung device and you have a Samsung account, your smartphone is automatically logged in to your account.
- If you log in from a smartphone produced for another country, you need to log in with its country code when you create your Samsung account, and the SmartThings app may not be used on some smartphones.


4 Connecting the SmartThings app to your product

1 Selecting the product to connect to

- 1) Start the SmartThings app about one minute after turning on the product to connect to.
- 2) After the SmartThings app is started, select 'ADD NOW' when a pop-up window saying that a product to connect to is found appears.

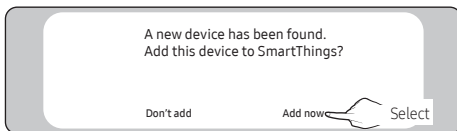


- 3) If the pop-up window does not appear, select "+", and then "Add Device".

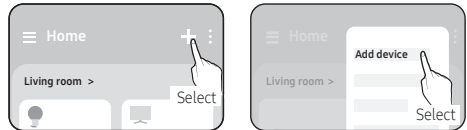

You can add a product you want to connect to by selecting it manually or by selecting "Scan nearby".

- Select manually: Samsung devices > Air conditioner
- Scan: Scan nearby > Air conditioner

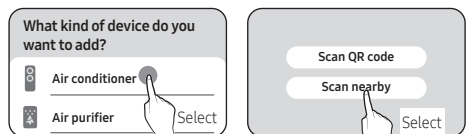

2 Connecting the SmartThings app to your product

- Follow the instructions displayed on the SmartThings app to connect to your product.
- For information on how to use the SmartThings app, select the How To menu on the app.

NOTE

- If any pop-up window appears on the top of the smartphone while connecting to your product, do not select it.
- If a pop-up window saying that the device is already registered appears during connecting to your product, get permission using "REQUEST PERMISSION" from a user already connected to the product, or create a new account using "REGISTER MY ACCOUNT" to independently connect to the product.
- If a Samsung account-related country error occurs while connecting to your product, log out of your current Samsung account, log in to your previous Samsung account, and then delete all devices that have been connected previously. Then, log in to your current Samsung account again, and configure the settings.

-
- If a failure message appears while adding a device, see "Setting up and connecting to a Wi-Fi access point using your smartphone" on page 5. The connection may fail temporarily due to an installation location problem of the access point or other problems.
 - If a message appears on the SmartThings app, follow its instructions.

NOTE

- For the security protocols for wireless/wired access points, WPA-PSK and WPA2-PSK are recommended. For the authentication methods, AES is recommended. New Wi-Fi authentication specifications and Wi-Fi non-standard authentication methods are not supported.
- The product supports the IEEE802.11 b/g/n (2.4 GHz) communication protocol. (Samsung recommends IEEE802.11n.)
- If your Internet service provider has permanently registered the MAC address (a unique identification number) of your PC or modem, you may not be able to connect your product to the Internet. Contact your Internet service provider and ask how to connect devices other than your PC (such as an air conditioner and an air purifier) to the Internet.

Open Source Announcement

The software included in this product contains open source software.

The following URL http://opensource.samsung.com/opensource/SMART_TP1_0/seq/0 leads to open source license information as related to this product.



Troubleshooting

Check the following before requesting a service from the Service Center

Symptom		Measure
The installed SmartThings app cannot access the air conditioner.		• Make sure you have connected the air conditioner to a wireless router.
I cannot log in with my Samsung account.		• Try recovering your ID and password from the Samsung account page.
Adding device(s)	A failure message appears while adding devices.	• This may fail temporarily due to the distance from the router or some interferences. Try again later.
	While adding the device, the progress stops at 0%-1% and a message appears saying that adding the device has failed.	• You cannot add any device without deleting it once the device has already been added to the SmartThings app. To add the connected device again, first remove it and then proceed with the process.
	While adding the device, the progress is stuck at 99% and a message appears saying that adding the device has failed.	• If you are using a Samsung smartphone, the server may not be connected temporarily. Restart the SmartThings app and then try adding the device again. • If your phone is not a Samsung product, check that you have entered a wrong Wi-Fi password. Try adding devices again.
	The app displays an authorization failure before pressing the user agreement button.	• Check if a Wi-Fi Kit Single is already connected from the SmartThings app. When there are devices added, first remove them and try again.
	The app displays an authorization failure on the user agreement screen.	• Make sure to press the [Power] button within 2 minutes after the screen appears. Try adding devices again.
	The screen requests to initialize the user account.	• This happens when the user has already added devices. Follow the instructions provided in the SmartThings app.
	After adding a device, the SmartThings app displays the disconnection event.	• This happens when a device is being added to the server or it is temporarily disconnected from the router. End the SmartThings app and then launch it again.

Regulatory Notice

Wi-Fi	
Frequency Range	Transmitter Power (Max)
2412 - 2472 MHz	20 dBm

Bluetooth	
Frequency Range	Transmitter Power (Max)
2402 - 2480 MHz	20 dBm

Hereby, Samsung declares that this radio equipment is in compliance with Directive 2014/53/EU and with the relevant statutory requirements in the UK. The full text of the EU declaration of conformity and the UK declaration of conformity is available at the following internet address: <http://www.samsung.com>, go to Support > Search Product Support and enter the model name.

