



Multifunction block solutions

- Flexible and compact design for individual applications
- Minimum dead space
- Easy integration of automation units with ELEMENT

Product variants described in the data sheet may differ from the product presentation and description.

Can be combined with

	Type SV02 Diaphragms	►
	Type 2036 Robolux multiway diaphragm valve, pneumatically operated	►
	Type 8690 Pneumatic control unit for decentralised automation of process valves ELEMENT	►
	Type 8691 Control head for decentralised automation of ELEMENT process valves	►
	Type 8692 Digital electropneumatic positioner for integrated mounting on process control valves	►
	Type 8098 FLOWave SAW flowmeter	►

Type description

These multi-way diaphragm valve blocks enable an almost infinite number of valve and process combinations. Multi-way valve systems achieve an extremely compact, space-saving design and represent an alternative to previous welded combinations, for example. Configurations can also be constructed that cannot be produced as welded combinations.

The valve body is made of solid material and is available in all industry-standard materials and surface qualities. By using multi-way diaphragm valve blocks, the number of weld seams is reduced, the effort and documentation within the validation is minimised and ultimately compliance with the 2D rule or 3D rule is possible. Designs with the smallest dead spaces and the desired optimised draining are possible. All multi-way valve systems can be combined with the proven Bürkert actuator and automation concepts.

Table of contents

1. General technical data	3
2. Approvals and conformities	5
2.1. General notes	5
2.2. Conformity	5
2.3. Standards	5
2.4. Explosion protection.....	5
2.5. Foods and beverages/Hygiene	5
2.6. Others	5
Certificates.....	5
TA Luft.....	6
3. Materials	6
3.1. Bürkert resistApp	6
3.2. Material specifications.....	6
Variant with ELEMENT actuator (Type 2103)	6
Variant with CLASSIC actuator (Type 2031).....	7
Variant with INOX actuator (Type 2063)	8
Variant with Robolux (Type 2036)	9
Variant with manual actuator (Type 3233)	9
Variant with manually operated actuator (Type 2933 – Basic)	10
Variant with manually operated actuator (Type 2973 – Full Function).....	10
3.3. Example of available diaphragm materials.....	11
4. Product connections	12
4.1. Configuration	12
5. Performance specifications	14
5.1. Medium pressure.....	14
Specification for control function A	14
6. Ordering information	16
6.1. Bürkert eShop	16
6.2. Bürkert product filter.....	16
6.3. Bürkert Product Enquiry Form	16

1. General technical data

Product properties	
Material²⁾	
Block body (VH) ¹⁾	Stainless steel block material 1.4435 according to DIN EN 10088 and 316L according to ASTM A479 / A479M
Block body (VI) ¹⁾	Stainless steel block material 1.4435 according to DIN EN 10088 and 316L according to ASME BPE (Table MM- 2.1.1, Ed. 2024) BN2 available on request
Additional information for weld-on components	Standard clamps and DIN 11864 connections according to VI specification Material for special weld-on fittings (elbows, reducers, etc.) on request
Diaphragm	EPDM (AD) ¹⁾ , PTFE / EPDM (EA) ¹⁾ , Advanced PTFE / EPDM (EU) ¹⁾ , laminate of GYLON® and EPDM (ER) ¹⁾ , advanced PTFE / EPDM laminated (EK) ¹⁾
Actuator	
ELEMENT (Type 2103)	Actuator DN 08...65, PPS DN 65...100, stainless steel 1.4308
CLASSIC (Type 2031)	Actuator casing DN 08...65, stainless steel 1.4561 (316Ti) DN 65...100, stainless steel 1.4308
Stainless steel/INOX (Type 2063)	PPS, PA, bonnet in stainless steel 1.4308 / 1.4404
Robolux (Type 2036)	Stainless steel 1.4404, bonnet in stainless steel 1.4308
Manual (Type 2933)	Stainless steel 1.4308 (CF8) Actuator (diaphragm base / hand wheel) Stainless steel / PPS, diaphragm size 8...50 PPS / PPS, diaphragm size 15...50
Manual (Types 2973)	Actuator (diaphragm base / hand wheel) Stainless steel / PPS, diaphragm size 15...50
Manual (Type 3233)	Actuator (diaphragm base / hand wheel) PPS / PPS, stainless steel / PPS or Stainless steel / stainless steel, diaphragm size 8...50 Stainless steel / stainless steel, diaphragm size 65...100
Diaphragm size	8...100
Standard surface quality	
Block body (VH/VI) ¹⁾	Internally electrically polished: Ra ≤ 0.38 µm (NO17) ¹⁾ (ASME BPE SF4 / DIN HE4) (externally Ra ≤ 1.6 µm) Internally mechanically polished: Ra ≤ 0.5 µm (NO14) ¹⁾ (ASME BPE SF1) (externally Ra ≤ 1.6 µm)
Automated component	Position feedbacks/control heads/positioners/process controllers
Performance data	
Maximum pilot pressure (CF A)	See "5.1. Medium pressure" on page 14
Pilot air port	Push-in connector Ø 6 mm/4 mm or 1/4", thread G 1/8"/G 1/4"
Medium data	
Operating medium	Neutral gases and liquids, highly purified, sterile, aggressive or abrasive mediums (see resistance chart ►)
Medium temperature	
EPDM (AD) ¹⁾	-10...+143 °C (steam sterilisation + 150 °C for 60 min)
PTFE/EPDM (EA) ¹⁾	-10...+130 °C (steam sterilisation + 140 °C for 60 min)
Advanced PTFE/EPDM (EU) ¹⁾	-5...+143 °C (steam sterilisation + 150 °C for 60 min)
Laminate of GYLON® and EPDM (ER) ¹⁾	-5...+130 °C (steam sterilisation + 140 °C for 60 min)
Robolux medium temperature	
EPDM (AD) ¹⁾	+5...+130 °C (steam sterilisation + 140 °C for 60 min)
Advanced PTFE/EPDM laminated (EK) ¹⁾	+5...+90 °C (not recommended for steam)
Laminate of GYLON® and EPDM (ER) ¹⁾	+15...+130 °C (steam sterilisation + 140 °C for 60 min)
Control medium	Neutral gases, air

Product connections

Port connection ^{2.)}

Nominal diameter ^{2.)} DN 06...DN 100 (1/8"...4")

Stainless steel body ^{2.)}

Welded connection ^{2.)} DIN EN ISO 1127 / ISO 4200 / DIN 11866 series B
DIN 11850 - 2 / DIN 11866 series A / DIN EN 10357 series A
ASME BPE / DIN 11866 series C

Clamp connection ^{2.)} DIN 32676 series A (DIN pipe)
DIN 32676 series B (ISO pipe)
ASME BPE

Environment and installation

Ambient temperature

ELEMENT

PPS, stainless steel -10...+60 °C ^{4.)}, autoclavable

CLASSIC

PPS, actuator size ≤ 80 mm +5...+140 °C ^{4.)}
PPS, actuator size 100 mm, 125 mm +5...+90 °C (short-term up to +140 °C) ^{4.)}
PA, actuator size ≤ 125 mm -10...+60 °C ^{4.)}
PA, actuator size ≥ 175 mm -10...+50 °C ^{4.)}

INOX

Stainless steel 0...+80 °C, autoclavable
Robolux 0...+60 °C

Manually operated

Type 2933, Stainless steel / PPS, PPS / PPS -10...+130 °C (briefly up to +150 °C), autoclavable
Type 2973, Stainless steel / PPS, PPS / PPS -10...+130 °C (briefly up to +150 °C), autoclavable
Type 3233, PPS / PPS 0...+130 °C (briefly...+150 °C) ^{4.)}
Type 3233, stainless steel / PPS 0...+130 °C (briefly...+150 °C) ^{4.)}
Type 3233, stainless steel / stainless steel -10...+140 °C (briefly up to +150 °C) ^{4.)}

- 1.) This information is part of the product key.
2.) Other variants are available on request.
3.) For plastic enclosures, temperature limitation possible due to enclosure material
4.) For standard variant, variants with higher temperatures possible

2. Approvals and conformities

2.1. General notes

- The approvals and conformities listed below must be stated when making enquiries. This is the only way to ensure that the product complies with all required specifications.
- Not all available variants can be supplied with the below mentioned approvals or conformities.

2.2. Conformity

In accordance with the Declaration of Conformity, the product is compliant with the EU Directives.

2.3. Standards

The applied standards which are used to demonstrate compliance with the EU Directives are listed in the EU-Type Examination Certificate and/or the EU Declaration of Conformity.

2.4. Explosion protection

Approval	Description
	Optional: Explosion protection (valid for the variable code PX50) As a category 2 device suitable for zone 1/21 and zone 2/22.

2.5. Foods and beverages/Hygiene

Conformity	Description
FDA	FDA – Code of Federal Regulations The diaphragms made of EPDM (AD), PTFE/EPDM (EA), Advanced PTFE/EPDM (EU) and laminate of GYLON® and EPDM (ER) comply with the Code of Federal Regulations published by the FDA (Food and Drug Administration, USA).
USP	United States Pharmacopeial Convention (USP) The diaphragms made of EPDM (AD), PTFE/EPDM (EA), Advanced PTFE/EPDM (EU) and laminate of GYLON® and EPDM (ER) are tested according to USP Class VI.
	EC Regulation 1935/2004 of the European Parliament and of the Council The diaphragms made of EPDM (AD), PTFE/EPDM (EA), Advanced PTFE/EPDM (EU) and laminate of GYLON® and EPDM (ER) are suitable for use with food and beverages (according to EC Regulation 1935/2004/EC).

2.6. Others

Certificates

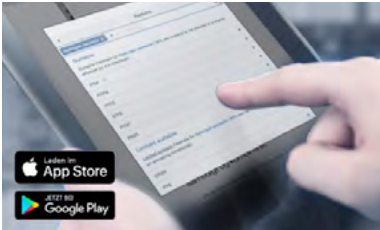
Certificate
• Material test certificate according to DIN EN 10204 - 3.1 • Surface roughness test according to DIN EN 10204 - 3.1 • Crack test according to DIN EN 10204 - 3.1 • Test report according to DIN EN 10204 - 2.2 • Diaphragm certificate according to DIN EN 10204 - 2.1 • Welding procedure certificate

TA Luft

Conformity	Description
TA Luft	Technical instruction on air quality control (valid for the variable code PM01)

3. Materials

3.1. Bürkert resistApp



Bürkert resistApp – Chemical resistance chart

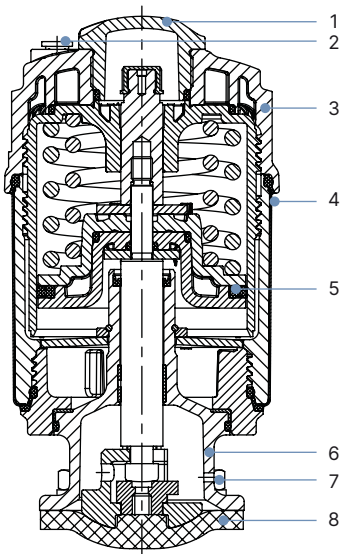
You want to ensure the reliability and durability of the materials in your individual application case? Verify your combination of media and materials on our website or in our resistApp.

[Start chemical resistance check](#)

3.2. Material specifications

Variant with ELEMENT actuator (Type 2103)


Diaphragm size: 08...65



No.	Element	Material
1	Transparent cap	Polysulfone PSU
2	Pilot air ports	Push-in connector PP (standard) Thread 1/8" stainless steel 1.4305 (on request)
3	Actuator casing	PPS
4	Cover	Stainless steel 1.4561 (316Ti)
5	Piston seal	FKM
6	Socket	Stainless steel 1.4308
7	Screws	Stainless steel
8	Diaphragm	EPDM (AD), PTFE/EPDM (EA), Advanced PTFE/EPDM (EU), laminate of GYLON® and EPDM (ER)

DTS 1000213540 EN Version: P Status: RL (released | freigegeben | valide) printed: 01.06.2026

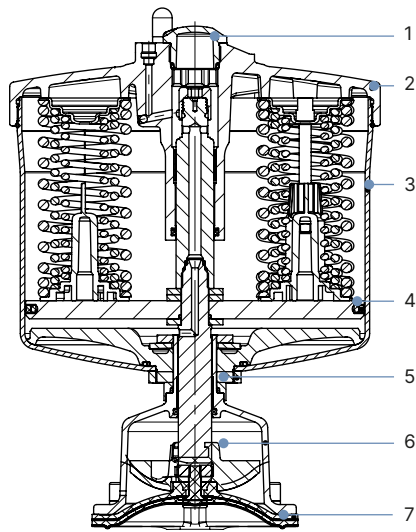
Diaphragm size: 65...100



No.	Element	Material
1	Transparent cap	Polysulfon PSU
2	Actuator casing	Stainless steel 1.4308
3	Liner	Stainless steel 1.4404
4	Piston seal	FKM
5	Nut	Stainless steel 1.4301
6	Diaphragm socket	Stainless steel CF3M
7	Diaphragm	EPDM (AD), PTFE/EPDM (EA), Advanced PTFE/EPDM (EU), laminate of GYLON® and EPDM (ER)


Variant with CLASSIC actuator (Type 2031)

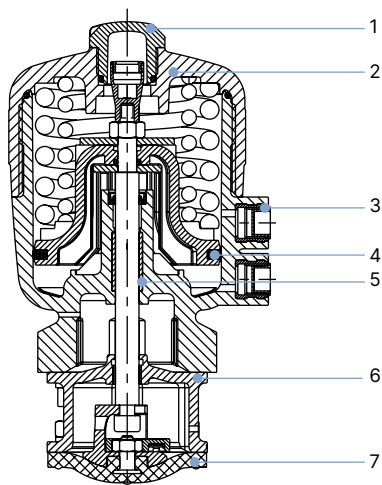Diaphragm size 08...65



No.	Element	Material
1	Transparent cap	Polysulfone PSU
2	Cover	Polyphenylene sulphide PPS (standard) Polyamide PA (on request)
3	Pilot air ports	Stainless steel 1.4305
4	Piston seal	FKM
5	Socket	Sinter metal
6	Interface	Stainless steel 1.4404
7	Diaphragm	EPDM (AD), PTFE/EPDM (EA), Advanced PTFE/EPDM (EU), laminate of GYLON® and EPDM (ER)

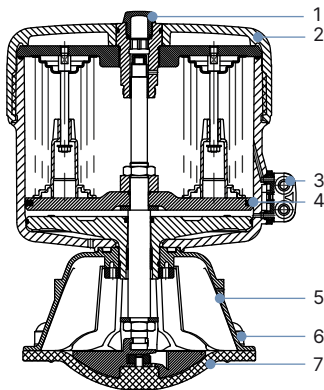
Diaphragm size: 65...100



No.	Element	Material
1	Transparent cap	Polysulfone (actuator size 40...125) Polycarbonate (actuator size 175...225)
2	Actuator	Polyphenylene sulphide PPS (actuator size 40...125) Polyamide PA (actuator size 175...225)
3	Pilot air ports	Stainless steel 1.4305
4	Piston seal	FKM (actuator size 40...125) NBR (actuator size 175...225)
5	Socket	Stainless steel 1.4404 (actuator size 40...125) Stainless steel 1.4308 (actuator size 175...225)
6	Screws	Stainless steel
7	Diaphragm	EPDM (AD), PTFE/EPDM (EA), Advanced PTFE/EPDM (EU), laminate of GYLON® and EPDM (ER)

Variant with INOX actuator (Type 2063)

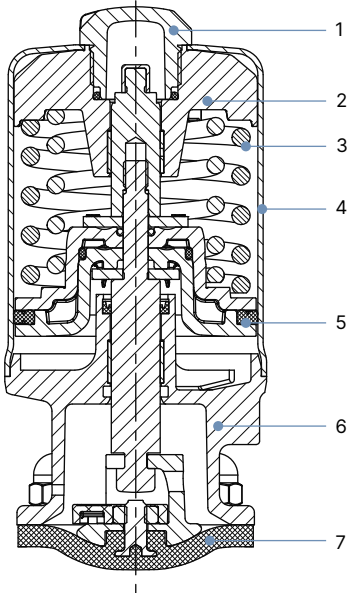
Diaphragm size: 08...50



No.	Element	Material
1	Transparent cap	Polysulfone PSU
2	Spring support	Stainless steel 1.4308
3	Spring	EN10270 - 2 FDSiCr
4	Actuator casing	Stainless steel 1.4404 (316L)
5	Piston seal	FKM
6	Actuator base (diaphragm socket)	Stainless steel 1.4308
7	Diaphragm	EPDM (AD), PTFE/EPDM (EA), Advanced PTFE/EPDM (EU), laminate of GYLON® and EPDM (ER)

Variant with Robolux (Type 2036)

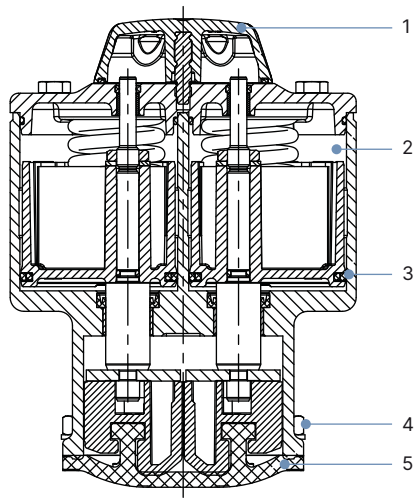
Actuator size RV50, RV70, RV110



No.	Element	Material
1	Transparent cap	Polyamide 12
2	Actuator	Stainless steel 1.4308/PPS
3	Piston seal	FKM
4	Screws	Stainless steel
5	Diaphragm	EPDM (AD),advanced PTFE/EPDM laminated (EK), laminate of GYLON® and EPDM (ER)

Variant with manual actuator (Type 3233)

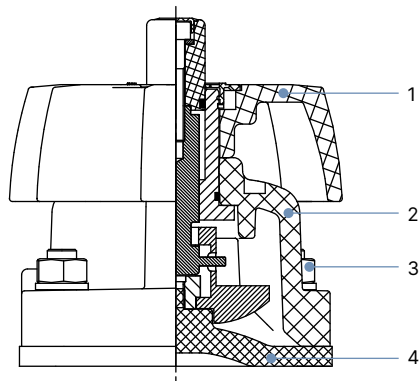
Diaphragm size 08...100



No.	Element	Material
1	Transparent cap	Diaphragm size 15...50: Polyoxymethylene Diaphragm size 65...100: stainless steel
2	Handwheel	Diaphragm size 8...50: Polyphenylene sulphide PPS (stainless steel on request) Diaphragm size 65...100: stainless steel
3	Socket	Diaphragm size 8...50: Polyphenylene sulphide PPS (stainless steel on request) Diaphragm size 65...100: stainless steel
4	Diaphragm	EPDM (AD), PTFE/EPDM (EA), Advanced PTFE/EPDM (EU), laminate of GYLON® and EPDM (ER)

Variant with manually operated actuator (Type 2933 – Basic)

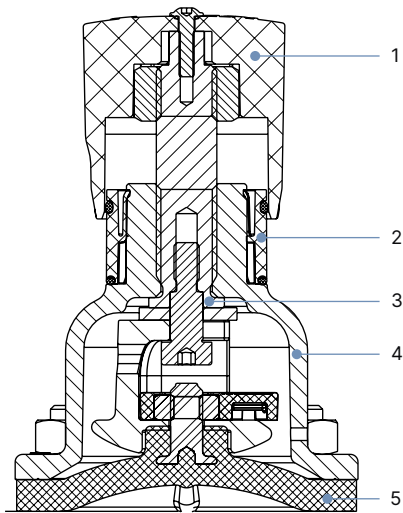
Diaphragm size 08...50



No.	Element	Material
1	Handwheel	Polyphenylene sulphide (PPS)
2	Visual position indicator	Polyamide (PA)
3	Valve spindle	Stainless steel 1.4305
4	Diaphragm bonnet	Stainless steel 1.4308, Polyphenylene sulphide (PPS)
5	Diaphragm	EPDM (AD), PTFE/EPDM (EA), Advanced PTFE/EPDM (EU), laminate of GYLON® and EPDM (ER)

Variant with manually operated actuator (Type 2973 – Full Function)

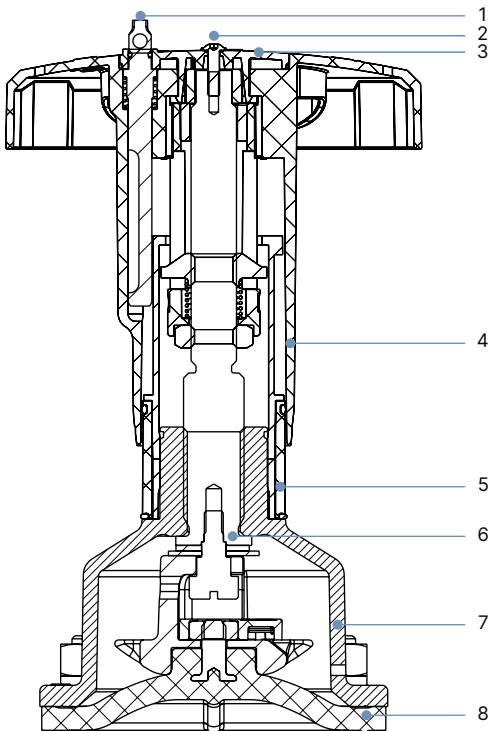Diaphragm size 15...50



No.	Element	Material
1	Lock pin	Stainless steel 1.4305
2	Screw	Stainless steel A2
3	Handwheel cover	Polyamide (PA)
4	Handwheel	Polyphenylene sulphide (PPS)
5	Visual position indicator	Polyamide (PA)
6	Valve spindle	Stainless steel 1.4305
7	Diaphragm socket	Stainless steel 1.4308
8	Diaphragm	EPDM (AD), PTFE/EPDM (EA), Advanced PTFE/EPDM (EU), laminate of GYLON® and EPDM (ER)

3.3. Example of available diaphragm materials

The diaphragms have been developed to meet the unique challenges of hygienic and sterile requirements. Bürkert offers diaphragms with precise material composition and high accuracy. Bürkert diaphragms are available in a wide range of materials which have been tested and proven in applications in the food and beverage, biotechnology, pharmaceutical and cosmetics industries. The diaphragms are tested during development and production to ensure reliability under difficult process conditions.



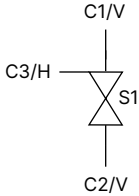
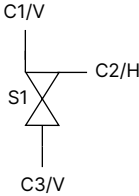
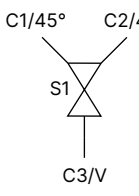
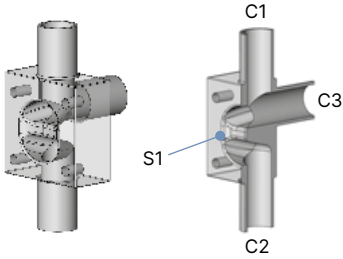
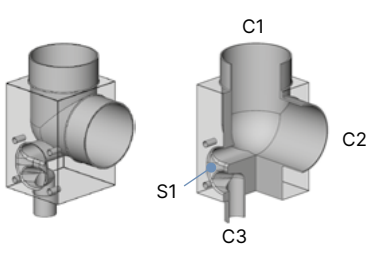
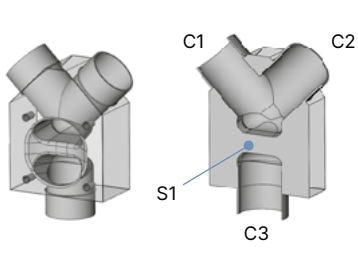
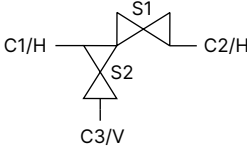
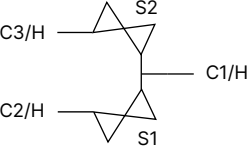
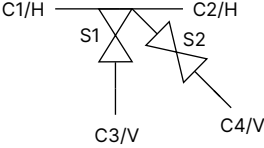
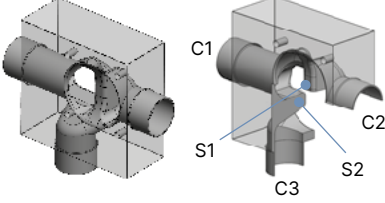
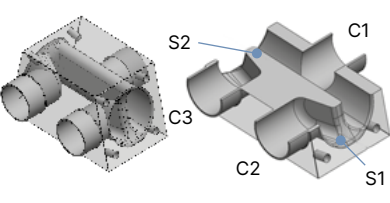
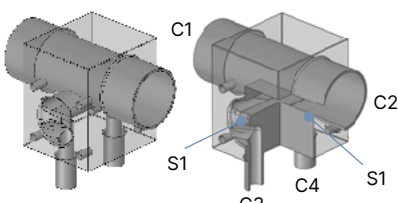
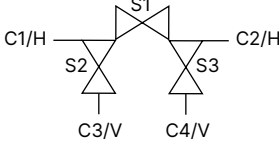
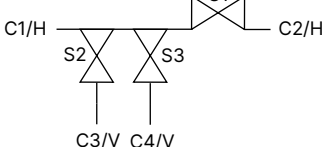
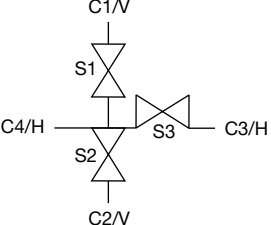
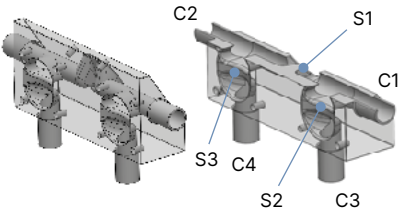
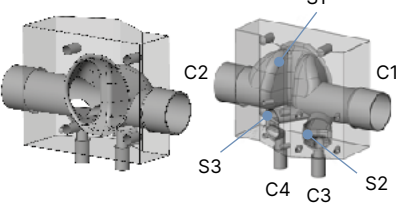
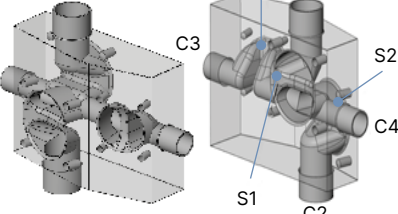
- EPDM (AD)
- PTFE/EPDM (EA)
- Advanced PTFE/EPDM (EU)
- Laminate of GYLON® and EPDM (ER)

Further information can be found in our flyer "Diaphragm competence for hygienic applications" on our [website](#) ►.

4. Product connections

4.1. Configuration

The following examples give an insight into our configuration programme. It is possible to implement customised block solutions. Further configurations can be found in the **block brochure Type 2034** ►.

GMPA	0113	0116
		
		
SAP1	0201	0203
		
		
0301	0336	0340
		
		

0423	0416	0602
0229	0206	MW56
K301	K302	K501

5. Performance specifications

5.1. Medium pressure

Specification for control function A

Note:

- For low operating pressures, optional variants with reduced spring force (EC04) are recommended.
- Pressure data [bar]: Overpressure to atmospheric pressure. Static: When closed, the valve is pressurised on one side with the maximum operating pressure.
- Information for control function B and I is available on request.

ELEMENT

Diaphragm size	Actuator size Ø	Pilot pressure	Maximum static operating pressure for seal materials	
			EPDM, FKM	PTFE/EPDM, advanced PTFE/EPDM, laminate of GYLON® and EPDM
	[mm]	[bar]	[bar]	[bar]
8	50 (D)	3.7...10	10	10 ^{1.)}
15	50 (D)	5.0...10	10	–
	70 (M)	4.8...10	10	10
20	70 (M)	4.8...10	10	10
25	70 (M)	4.8...10	10	6
	90 (N)	5.0...10	10	10
40	90 (N)	5.5...10	7.5	6 ^{2.)}
	130 (P)	5.0...7	10	10
50	130 (P)	5.0...7	10	10
65	130 (P)	5.0...7	7.5	5
	225 (L)	2.7...7	10	10
80	225 (L)	5.4...7	10	10
100	225 (L)	5.6...7	10	10 ^{3.)}

1.) Variant is only available with reinforced spring pack

2.) Laminate of GYLON® and EPDM (ER diaphragm) is not available.

3.) The maximum operating pressure for advanced PTFE/EPDM (EU diaphragms) is 9 bar.

CLASSIC

Diaphragm size	Actuator size Ø	Pilot pressure	Maximum static operating pressure for seal materials	
			EPDM, FKM	PTFE/EPDM, advanced PTFE/EPDM, laminate of GYLON® and EPDM
	[mm]	[bar]	[bar]	[bar]
8	40 (C)	5.0...7	10	10
15	50 (D)	5.0...7	10	–
	63 (E)	5.0...7	10	10
20	63 (E)	5.5...7	10	10
	80 (F)	5.0...7	10	10
25	80 (F)	5.5...7	10	10
32	100 (G)	5.5...7	10	10
40	100 (G)	5.5...7	10	9 ^{1.)}
	125 (H)	5.5...7	10	10
50	125 (H)	5.5...7	10	10
65	175 (K)	5.0...6	10	6
80	175 (K)	5.0...6	7	4 ^{2.)}
	225 (L)	5.0...6	10	10
100	225 (L)	5.0...6	10	7

1.) The maximum operating pressure for laminate of GYLON® and EPDM (ER diaphragm) is 6 bar.

2.) The tightness value only applies to laminate of GYLON® and EPDM (ER diaphragm), otherwise 0 bar for PTFE/EPDM and advanced PTFE/EPDM (EA and EU diaphragms).

INOX

Diaphragm size	Actuator size Ø	Pilot pressure	Maximum static operating pressure for seal materials	
			EPDM, FKM	PTFE/EPDM, advanced PTFE/EPDM, laminate of GYLON® and EPDM
	[mm]	[bar]	[bar]	[bar]
8	32 (B)	5.5...10.5	10	10
15	50 (D)	5.0...10.5	10	–
	70 (M)	5.0...10.5	10	10
20	70 (M)	5.0...10.5	10	10
25	70 (M)	5.0...10.5	10	6
	90 (N)	5.0...10.5	10	10
32	90 (N)	5.0...10.5	10	10
40	90 (N)	5.5...10.5	7.5	6 ^{1.)}
	130 (P)	5.0...7.5	10	10
50	130 (P)	5.0...7.5	10	10

1.) Laminate of GYLON® and EPDM (ER diaphragm) variant is not available.

Robolux

Actuator size	Actuator variant	Pilot pressure	Maximum static operating pressure for seal materials		
			EPDM	Advanced PTFE laminated	Laminate of GYLON® and EPDM
		[bar]	[bar]	[bar]	[bar]
RV50	D11	6...10	7.5	7.5	5.5
	D55 (reduced spring force)	4...10	5.0	3.5	o. r.
RV70	D11, D1x, Dx1	6...10	8.0	8.0	5.5
	D55 (reduced spring force)	4...10	5.5	6.0	4.5
RV110	D11, D1x, Dx1	6...7	7.0	7.5	6.0
	D55 (reduced spring force)	4...7	5.0	5.0	4.0

o. r. = on request

6. Ordering information

6.1. Bürkert eShop

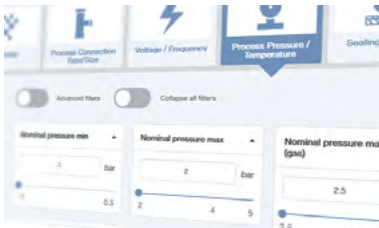


Bürkert eShop – Easy ordering and quick delivery

You want to find your desired Bürkert product or spare part quickly and order directly? Our online shop is available for you 24/7. Sign up and enjoy all the benefits.

[Order online now](#)

6.2. Bürkert product filter



Bürkert product filter – Get quickly to the right product

You want to select products comfortably based on your technical requirements? Use the Bürkert product filter and find suitable articles for your application quickly and easily.

[Try out our product filter](#)

6.3. Bürkert Product Enquiry Form

Note:

Please see our Product Enquiry Form for a full explanation of our specification key.

Bürkert Product Enquiry Form – Your enquiry quickly and compactly

Would you like to make a specific product enquiry based on your technical requirements? Use our Product Enquiry Form for this purpose. There you will find all the relevant information for your Bürkert contact. This will enable us to provide you with the best possible advice.

[Fill out the form now](#)